



User Interface Manual

Rev 231208

Contents

Copyright Notice	6
Melco OS V11 Version Changes	7
v11.19.XXX	7
v11.18.XXX	7
v11.17.XXX	7
v11.16.XXX	7
v11.15.XXX	8
v11.14.XXX	8
v11.13.XXX	8
v11.12.XXX	9
v11.11.XXX	10
v11.10.XXX	12
v11.09.XXX	12
v11.08.XXX	13
v11.07.XXX	14
v11.06.XXX	15
v11.05.XXX	15
v11.04.XXX	15
v11.03.XXX	16
v11.02.XXX	16
v11.01.XXX	18
Cart Assembly	20
Assembly	21
Previous Cart Style	24
Unpacking the Machine	27
Setting up the Machine	27
Install the Machine User Interface and X-Beam End Caps	30
Machine Overview	31
Software Activation & Deactivation	32
Lite	32
Product Activation	32

Product Deactivation	33
Machine Connections	34
Do Not Share Networks	34
Connecting the Power Cables	34
Connecting the Network Cable (Single Machine)	35
Connecting the Network Cables (Multiple Machines)	36
Selecting The Connection	37
Powering Up the Machine	38
Initial Power Up Sequence	38
Upper Threading	39
Threading the Machine for the First Time	39
Quick Thread Change	40
Upper Thread Path	42
Bobbin Threading and Tensioning	46
Removing the Bobbin Case	46
Cleaning the Bobbin Case	46
Inserting a New Bobbin in the Bobbin Case & Checking the Tension	47
Bobbin Case Tension Gauge	48
Inserting the Bobbin Case	51
Initial Maintenance	52
User Interface	53
Main Screen Overview	53
Machine Status	54
Selecting Machines	55
Selecting Multiple Machines	55
Loading A Design	56
Resetting a Design	59
Move & Rotate	60
Moving	60
Rotating A Design	61

Move to Color	61
Move to Stitch	61
Laser Alignment (Design Registration)	62
Color Sequence	64
Setting Up the Thread Tree	65
Setting the Color Sequence	67
Adding Machine Commands to the Sequence	69
Adding Effects to a Color Block	71
Hoop Selection	73
Choosing the Appropriate Hoop for the Job	74
Material Thickness	76
Selecting a Material Thickness	76
Adjusting Material Thickness	77
Machine Speed	79
Settings	81
Closest Color Match on Load	81
Bobbin Detect	81
Wide Angle Driver Color	81
Presser Foot Adjustment	82
Maintenance	82
Advanced Settings	83
Advanced Settings Button	83
Connections	83
Restart in Melco OS Advanced Interface	83
Machine Reset	84
Check for Update	84
Deactivate Product	84
Hooping	85
Adjusting the Hoop Tension	85
Hooping the Garment or Fabric	87
Hooping Tips	89

Attaching or Moving the Hoop Support Arms	90
Attaching the Hoop Support Arms	90
Removing the Hoop Support Arms	92
Adjusting the Spring Clips	92
Loading a Hoop onto the Machine	93
Adjusting the Presser Foot	94
Keypad Operations	96
One Touch Controls	96
Key Combinations	97
LED Indicator	100
Needle Types and Replacements	101
Replacing a Needle	101
Choosing a Needle	102
Sewing Caps	105
Selecting the Wide Angle Driver and Hoop	105
Installing & Removing the Wide Angle Driver	106
Red Wide Angle Driver Cap Support Wings (Option)	112
Adjusting the Red Wide Angle Driver	117
Hooping a Cap on the Conventional Cap Frame	120
Hooping a Cap on the Wide Angle Cap Frame	125
Loading/Removing a Hoop with the Wide Angle Driver	134
Digitizing for Caps	136
Sew Settings for Caps	139
Adjusting the Presser Foot for Caps	139
Centering a Design on a Cap	140
Maintenance	143
Wide Angle Driver Maintenance	143

Copyright Notice

© Copyright Melco, 2023

ALL RIGHTS RESERVED. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise) without prior written approval from the author. The author reserves the right to revise this publication and to make changes in it at any time without obligation of the author to notify any person or organization of such revisions or changes.

All precautions have been taken to avoid errors or misrepresentations of facts, equipment, or products. However, the manufacturer does not assume any liability to any party for loss or damage caused by errors or omissions.

The machine technology is protected by - but not limited to - the following patents:

- Pat. US 6,445,970 B1
- Pat. US 6,823,807
- Pat. CH 693569 A5
- Pat. US 6,736,077 B2
- Pat. US 6,732,668 B2
- Pat. US 6,871,605
- Pat. US 6,983,192 B2
- Pat. US 7,308,333 B2
- Pat. US 7,513,202
- Pat. US 8,851,001 B2
- Pat. US 9,702,070
- Other patents pending

Melco OS V11 Version Changes

v11.19.XXX

- Various firmware updates and improvements.
- Various bug fixes and improvements.

Note: The machine might sound different during operation after loading this software update.

v11.18.XXX

- Various firmware updates and improvements.
- Various bug fixes and improvements.

Note: The machine might sound different during operation after loading this software update.

v11.17.XXX

- Various firmware updates and improvements.
- Various bug fixes and improvements.

Note: The machine might sound different during operation after loading this software update.

v11.16.XXX

- Melco Internal Release - Improvements rolled into 11.17.XXX

v11.15.XXX

- Check for Updates - The behavior of the “Check for Updates” button has been changed. It will now launch an external browser and connect to different server. The installation of the software will now be performed by the user in the same manner as the initial installation. Installation guides and requirements are provided on the download page.
- Various bug fixes and improvements.

v11.14.XXX

- Various firmware updates and improvements.
- Various bug fixes and improvements.

Note: The machine might sound different during operation after loading this software update.

v11.13.XXX

- Added a test to ensure proper reinstallation of needle plate during maintenance.
- Canceling out of the hook maintenance timer will now also stop any trimmer movements.
- Various firmware updates and improvements.
- Various bug fixes and improvements.

Note: The machine might sound different during operation after loading this software update.

v11.12.XXX

- Added compatibility for OFM files created with DesignShop versions newer than v10.
- Added Hoops
 - Mighty Hoops:
 - 3.25" x 12" (8.25 x 30.5 cm)
 - Allied Hoops:
 - 12" x 9" (30 x 24 cm)
 - 8" x 7.5" (20 x 19 cm)
 - 5" x 4.5" (12 x 11 cm)
 - 8.3" (21 cm) round
 - 3.5" (9 cm) round
 - 2.75" (7 cm) round
 - 16" x 12" (40 x 30 cm)
 - 12" x 16" (30 x 40 cm)
 - 9" x 9" (24 x 24 cm)
 - 12" x 12" (30 x 30 cm)
 - 14" x 11" (37 x 28 cm)
 - 11" x 14" (28 x 37 cm)

v11.11.XXX

- Added EMT16X support
- Added Needle Plate Trimmer (NPT) support
- Removed the monthly maintenance from the recommended initial maintenance steps.
- Security Updates
- Bobbin tension changes
- The machine may automatically slow for longer stitch movements in X, Y, or now Z. Longer stitches, as well as higher thread feed values, may affect speed.
- Stitches in complex fills will no longer be removed upon rotation in OS.
- Laser alignment no longer reassigns color sequence when auto-match is on.
- “Copy X/Y position to group” now works in advanced and simplified UI both.
- Corrected machine head up timeout issue.
- Corrected an issue that would allow the machine to move X/Y while the needle was in the fabric.
- Resolved an issue that would occasionally cause a machine to fall offline from the software when a maintenance procedure was ignored.
- As of this update, the user must check for updates. No automatic notification will be presented.
- Corrected an issue that would cause the orientation of the design or design elements on screen to be different than the design being sewn.
- Moving the hoop in X after a trace will no longer cause the hoop to also move in Y.
- If closed early, the software will not prevent the user from launching the software again.
- Corrected issue where acti-feed setting would change after a larger number of color changes.
- Corrected handling of invalid characters in barcode names.

- Added hoops:
 - Allied Hoops:
 - 7.0" x 6.5" (17 x 16 cm)
 - 6.0" x 5.5" (15 x 14 cm)
 - 3.5" (12 cm) round
 - 5.9" (15 cm) round
 - 7.1" (18 cm) round
 - Mighty Hoops:
 - 16.625" x 17.25" (41.3 x 43.8 cm)
 - 10" x 5" (25.4 x 12.7 cm)
 - 6" x 9" (15.25 x 22.86 cm)
 - 12" x 15" (30.5 x 38.1 cm)
 - 4.25" x 16" (10.8 x 40.6 cm)
 - 19" x 10" (48.25 x 25.4 cm)
 - 16" x 14" (40.6 x 35.6 cm)
 - Slim Line 2:
 - 6.5" x 6.5" (16.5 x 16.5 cm)
 - 8" x 5" (20.3 x 12.7 cm)
 - Slim Line 1:
 - Hat Side Right Clamp
 - Hat Side Left Clamp
 - Red Driver
 - Back of Cap Clamp XL

v11.10.XXX

- Melco Internal Release

v11.09.XXX

- A one second delay has been added to the center key on the keypad when pressing it alone to focus the software on the machine. This was added to prevent machines switching during design loading with multiple operators.
- Security has been updated.
- Thread feed motor tuning has been altered to reduce operating temperature. This will change the sound of the thread feed when the machine is running.
- Minor bug fixes and performance improvements.

- Trace, frame forward, and frame backward have all be restored to behaviour from 11.08.XXX.
- Resolved an issue that would occasionally cause an overcurrent error message to be unable to be cleared.
- Parameters updated to accommodate new cutter blade hardware.

v11.08.XXX

- Addition of the following hoops
 - Mighty Hoop 6" x 4" / 15.2cm x 10.2cm
 - Mighty Hoop 3" x 9" / 7.6cm x 22.9cm
 - Melco Fast Clamp
- Adjusted Dream Frame hoop limits
- Updated Gunold thread charts.
- Resolved multiple maintenance UI issues
- Keypad commands entered while in load design screen will no longer lock keypad after exiting
- Color sequence improvements - Color blocks starting with trims will not adversely affect the sequence
- Improvements for machines with serial numbers of 403291 and above include:
 - Puff settings will remain after a trim
 - Stitch limit increased to 600,000
 - Start, tie, and trim improvements
 - Registration is retained after a manual trim
 - Needle centering at homing has been changed
- Minor bug fixes and performance improvements

v11.07.XXX

- Added support for the EMT16 PLUS.
- Added support for Virtual Security Keys
- “Machine Restarting” text now shows a more informative “Syncing Files and Updating Machine” as well as “This Process May Take Up To Five Minutes”.
- Maintenance Improvements
 - In the quarterly procedure, steps 4-13 through 4-19 have been altered to move the machine to a better position for tightening screws.
 - In the weekly procedure, the machine will not move to needle 1 between steps 4 and 5.
- Moving forward, updates will no longer overwrite colors assigned to the thread tree.
- Trimming improvements for rotary trimmers in earlier serial numbers.
- Inching count has been corrected and is now always respected.
- Machines now display the last state if UI is restarted.
- Color change homing at start up has been improved. Needle case calibration may be required. Instructions for calibration are located in the technical manual.
- Z-Axis issue of occasionally not finding home has been resolved.
- Improvements for machines with serial numbers of 403291 and above include:
 - Smoother movement in X and Y
 - Increased strength in Z
 - Improved initial start-up procedure
 - Tuning improvements in stitch dynamics
 - Tuning improvements in thread trimming
- Return to Origin addressed
- Hoop limit detection verification upon launch

v11.06.XXX

- Maintenance Timers - The time-based timers will now notify users when maintenance is due.

Note: Daily, Weekly, and Monthly maintenance will be requested after installation of this version of software. If recently performed, these maintenance procedures may be stepped through solely in the software to reset the timers. If not recently performed, please follow the procedures on the machine as the software prompts.

- Minor bug fixes and performance improvements.

v11.05.XXX

- Packaging changes for the machine.
- Mighty Hoops - The hoop limits have been adjusted to allow for sewing closer to the edges and corners. Additional hoops have been added.
- Strap Clamps - Strap clamps have been added to the hoops.
- Acti-feed and trim improvements.
- Updated security support.
- Enhanced hardware support.
- Minor bug fixes and performance improvements.

v11.04.XXX

- Check For Updates - If updates are available, the software will automatically display an update notification. Internet connection is required for this feature.
 - Update process improvements.
- Bypass for "Trim Required" - Should you encounter a "Trim Required" message, it may be bypassed using the keypad command of adjustment key + hoop key.
- 3D Puff - Dual buttons for 3D puff application. There is now a button for thinner foam and another for thicker foam.

melco

- Adjustment of thread break sensor readings to reduce false upper and lower thread breaks.
- Bobbin case recommendation change - change in construction and pigtail location/angle.
- Single Stitch Filtering – A single stitch flanked by jumped stitches will now be filtered out to avoid needle breaks.
- Help in Italian – This manual has been translated and made available in Italian.
- Addition of the following Mighty hoops
 - 7.25" x 7.25" / 18.4cm x 18.4cm
- Windows 10 Compatible

v11.03.XXX

- Check For Updates - Now the update link provides the option to download and view "What's New" in the new version before choosing to update.
- Updates will also prompt user to restart machine(s).
- Rotation Feature - User Interface will now only allow numeric input.
- Manual Update - LED status has been added to the manual.
- Maintenance Updates - Thread Feed Roller removal now shows removal tool as well as two flat-bladed screw drivers. Removal and Reinstallation of Side Covers is now model-specific.
- File Support - All file extensions supported in the Advanced User Interface are now supported in the User Interface.

v11.02.XXX

- Optimization to thread break sensor calibrations (Advanced Interface)
- Ability to update Melco OS V11 via check for updates (need Internet connectivity)

melco

- Addition of the following Mighty hoops
 - 8.25"x6.25"/21cmx15.9cm
 - 4.25"x4.25"/10.8x10.8cm
 - 5.5"x5.5"/13.5x13.5cm
 - 10"x10"/25x25cm
 - 4.25"x13"/10.8x33cm
 - 13"x8"/33x20cm
 - 13"x11"/33x28cm
 - 15"x12"/ 38x30cm
 - 16"x13"/40.6cmx33cm
- Addition of the following HoopTech Clamps/Frames
 - Small Shoe Clamp
 - Large Shoe Clamp
 - Red Cap Side Clamp
 - Koozie Clamp
 - Hat Back Clamp
 - Dream Frame
- Ability to send a design from DesignShop to Melco OS
- Fixed issue with design displaying the previous design on main screen and simplified view
- Increase stitch limit to 205,000 stitches
- Melco OS tool bars will snap to one line if screen is maximized
- Added Melco XT and XTS to hoop machine type
- Added Russian language support to the simplified view
- Copyright date is now 1992-2015
- During installation the communications drivers are signed by Melco

v11.01.XXX

- Simplified user view along with tradition Melco OS view. This is optimized for a touch screen Windows device.
- Two click installation of Melco OS
- Hoop database is now located a shared location with DesignShop V10
- Ability to load .emb file format (up to 1.8)
- Ability to load .psf (Pulse) file format
- Ability to load .art file format (up to .art70)
- Additional .jef file support
- Updated stitch based maintenance (this is done while in the advanced interface in Melco OS V11)
- Time based maintenance (this is done while in the simplified user view in Melco OS V11)
- Operator's manual has been updated and now is in .pdf format.
- Updated Madeira Poly Neon thread chart
- Updated Isacord 40 thread chart
- SE level supports one machine only
- Improved icon preview generation
- Fully compatible with Windows 7, Windows 8, and Windows 8.1 without compatibility mode enabled
- Simplified hoop selection by hoop type categories. For example: square hoops, round hoops, etc. (Simplified user view in MOS V11)
- Simplified acti-feed selection by just selecting a product type. For example: if the user is sewing a polo shirt they can just select the t-shirt in product type in the simplified user view in MOS V11.
- Simplified position screen. User can easily do things like rotate a design 180 degrees by just a single click (Simplified user view in MOS V11)
- Simplified load design window (Simplified user view in MOS V11)
- Simplified color sequence window. This includes a puff and fancy stitch function that can be just dragged onto the color that you want it applied to. This also includes a color sequence repeat


melco

function. This can be applied when doing applications like step and repeat (Simplified user view in MOS V11)

- Thread break sensor calibration tool. This allows you to fine tune the thread break sensor so that false thread breaks can be eliminated (Advanced Interface view in MOS V11)
- New colorized status bar. This allows the user to see from a distance what is going on with each machine without walking over to the PC screen (Simplified user view in MOS V11)
- Presser foot adjustment button (Simplified user view in MOS V11)

Cart Assembly

This cart consists of the items assembled as shown.

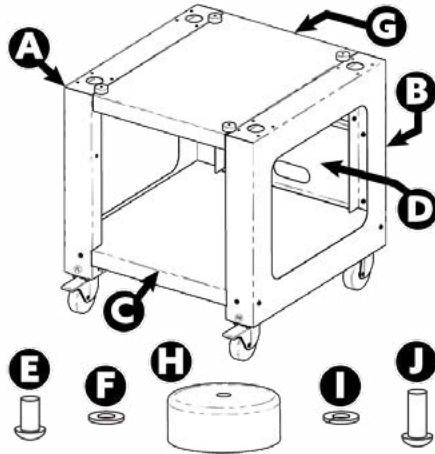

Item	Qty.	Description
A	1	Left Cart Leg Assembly
B	1	Right Cart Leg Assembly
C	1	Cart Base Support
D	1	Cart Rear Support
E	14	M6 x 1.0 x 12mm Button Head Screw
F	18	M6 Flat Washer
G	1	Cart Shelf
H	4	Locator
I	4	M6 Split Lock Washer
J	4	M6 x 1.0 x 16mm Button Head Screw

Tool Required

- 4mm hex wrench (like the one included in the machine operator's kit)

Prior to assembly of the cart, place cardboard or a blanket on the floor to prevent damaging cart parts.

Assembly


Assembly of the cart is easiest on the floor. If you are concerned with marking up the cart or floor, begin by placing down a large piece of cardboard or a blanket.



The assembly of the larger pieces may be easier with two people. One person can hold while the other attaches. It isn't necessary, but it can make assembly smoother.


Stage 1 - Attaching the Base Support

1. Place items A and B (Cart Leg Assemblies) on the floor with the Casters facing up. The Casters with the brake face the front of the Cart.
2. Assemble Item C (Base Support) into the cut outs (see arrows) located on each side of both Cart Legs, Items A and B, as shown.
3. Install (6 each) items E and F (M6 x 12mm Screw and M6 Washer) at locations shown. Assemble loosely, do not tighten.
4. Fully tighten all (6) item E Screws.

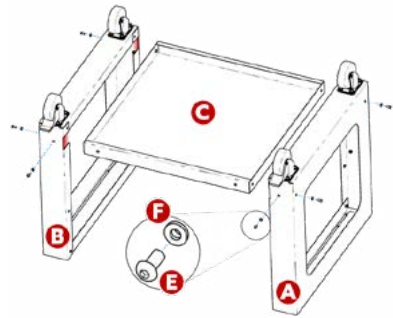

Stage 2 - Installing the Rear Support


5. Rotate the Cart to its upright position.
6. Assemble Item D (Rear Support) to the rear side of the Cart, with the obround opening facing towards the bottom of the cart, resting on item C (Base Support).
7. Install (4 each) items E and F (M6 x 12mm Screw and M6 Washer) at locations shown. Assemble loosely, do not tighten.
8. Fully tighten all (4) item E Screws.

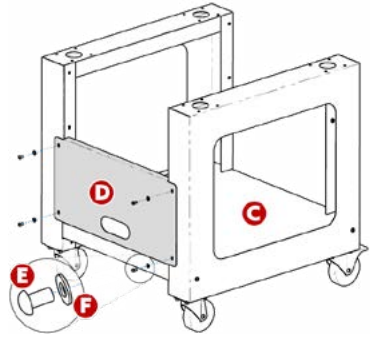

Stage 3 - Installing the Cart Shelf - OPTIONAL


Installation of item G (Cart Shelf) is optional. It can be installed in the upper or the middle positions as shown.

9. Position item G (Cart Shelf) in the desired upper or middle location, as shown.
 - For a shelf configuration, orient the smooth face of item G (Cart Shelf) facing the top of the Cart.
 - For a tray configuration, orient the smooth face of item G (Cart Shelf) facing the bottom of the Cart.
10. Install (4 each) items E and F (M6 x 12mm Screw and M6 Washer) at locations shown. Assemble loosely, do not tighten.
11. Fully tighten all (4) item E Screws.

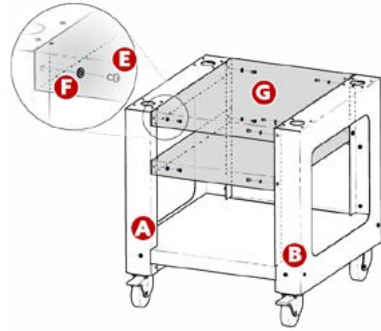

Assembly of the Cart is now complete.

Previous Cart Style

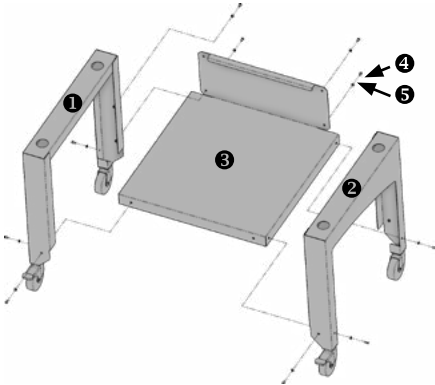

The cart consists of the items assembled as shown in the figure to the right. This assembly requires a 4mm hex wrench like the one included in the operator's kit.




Item	Qty.	Description
1	1	Left Cart Leg
2	1	Right Cart Leg
3	1	Cart Shelf
4	10	Zinc Btn Hd Cap M5 X 0.8 X 8mm Screw
5	10	Washer, Flat, M6

It will most likely be easiest to assemble the cart on the floor. If you are concerned with marking up the cart, first place down a large piece of cardboard or a blanket.


Stage 1

1. Place Right Cart Leg flat with the outside surface of the leg facing down. The outside surface is the side with the curve cut into the face.
2. Position the Cart Shelf with the back support on the leg without the locking caster. The shelf should slide into the lower cutout section of the side supports of the legs.
3. Loosely assemble a screw and washer into the front section of the leg and shelf. They will be fully tightened during a step.

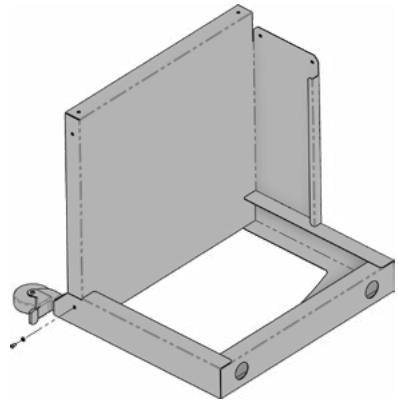


Stage 2

4. On the back, loosely assemble two screws and two washers into the back support of the cart and the back of the leg. They will be fully tightened during a step.

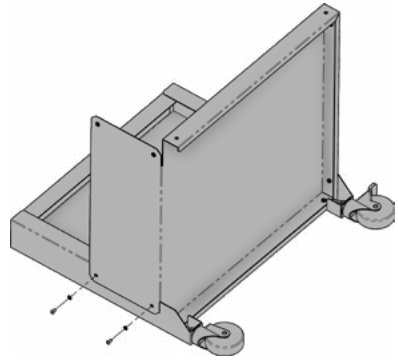


Stage 3

5. Position the cart so the back surface is down.
6. On the outside surface of the legs, loosely assemble two screws and two washers into the leg and shelf. They will be fully tightened during a step.

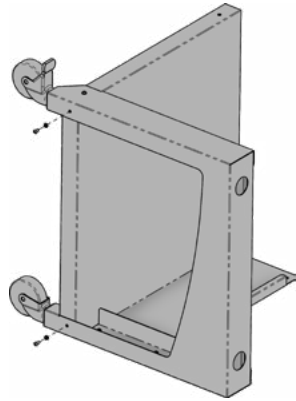


Stage 4

7. Position the left leg so the cart shelf is inside the lower cutouts of the legs. Make sure the locking caster is on the leg portion facing up.
8. Loosely assemble the three sets of screws and washers into the leg and cart as shown. They will be fully tightened during a step.

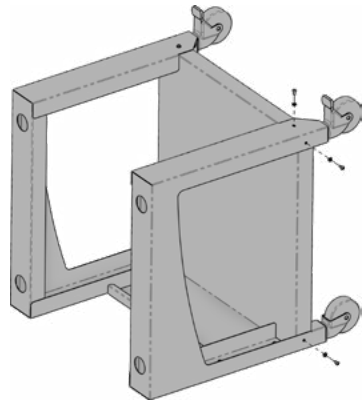


Stage 5

9. Position the cart on the casters as shown.
10. On the back, loosely assemble two screws and two washers into the back support of the cart and the back of the leg. They will be fully tightened during a step.

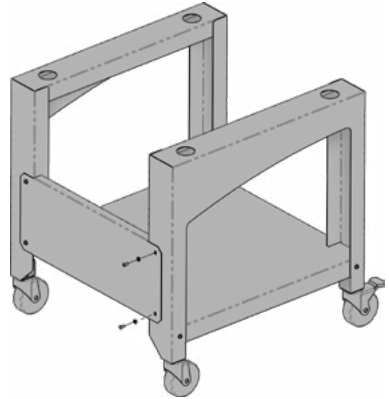

Stage 6

11. Tighten all screws.
12. Cart Assembly is complete!

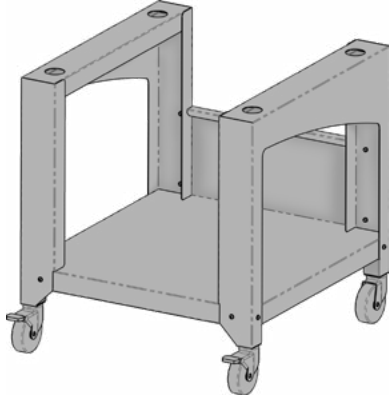

Unpacking the Machine

If your machine was delivered, this may have been completed by the delivery service. It is still recommended that you reconcile your shipment with your packing list. It is important to check the packing list instead of the invoice. The invoice will show all items that were ordered, but the packing list will indicate if any items are on back order.



Setting up the Machine

If the machine was not delivered, the following instructions will walk you through unpacking your machine. Please read these instructions completely before proceeding.

13. Remove the outer packing/holding straps by cutting them.



14. Remove the options box and set aside.
15. Remove the main lid and carefully lift the exterior box up and away from the machine.



16. Cut the packing/holding straps securing the machine to the box/pallet. Remove any additional loose packaging, boxes, and foam spacers.



17. Locate the four handles in the packaging. They will be contained in their own box. Place two handles on each side of the machine. On each leg, the handles should be close to the front and one close to the back. There are cuts in the base box to make this easier to accomplish.
 - a. To place the handle, align the angled edge to the t-channel in the leg of the machine base.



- b. Rock forward and lift slightly up on the handle to rotate it into place.



18. With two people, lift the machine using the handles on both sides of the machine.

Do not attempt to lift the machine alone. Always move the machine with two people.

Each person should attach and use the handles for each side of the machine. When moving the machine, take care not to apply pressure against the needle case.


19. Place the machine on the assembled cart so that the padded feet of the machine fall into the holes on the tops of the machine cart.



Make sure the back support of the cart is to the back and the locking casters are in front.


Install the Machine User Interface and X-Beam End Caps

1. Locate the box containing the user interface and end caps. The box is labeled with the image to the right.
2. Attach the user interface assembly.

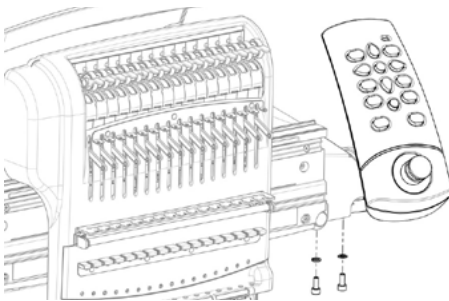


Interface,
User
Assembly
QTY: 1 set

Cap, End X-Beam
QTY: 2 pieces




Using the two screws and two lock washers that came with the user interface assembly, attach the interface as shown in the image using a 4mm hex wrench.

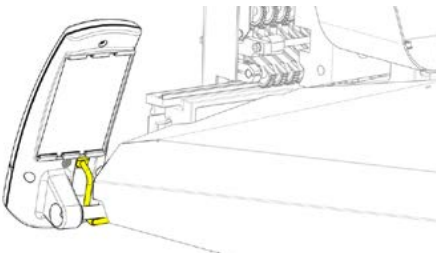


Route the network cable (shown in yellow) from under the right side machine cover, under the user interface mounting bolt, and plug into the back of the user interface assembly.

3. Insert the X-beam end caps on either side of the x-beam as shown in the image below.

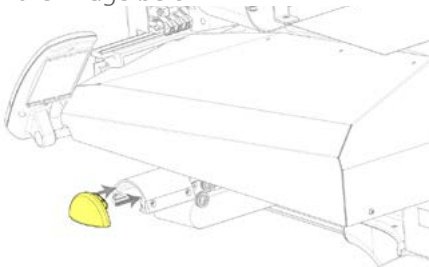

Machine Overview

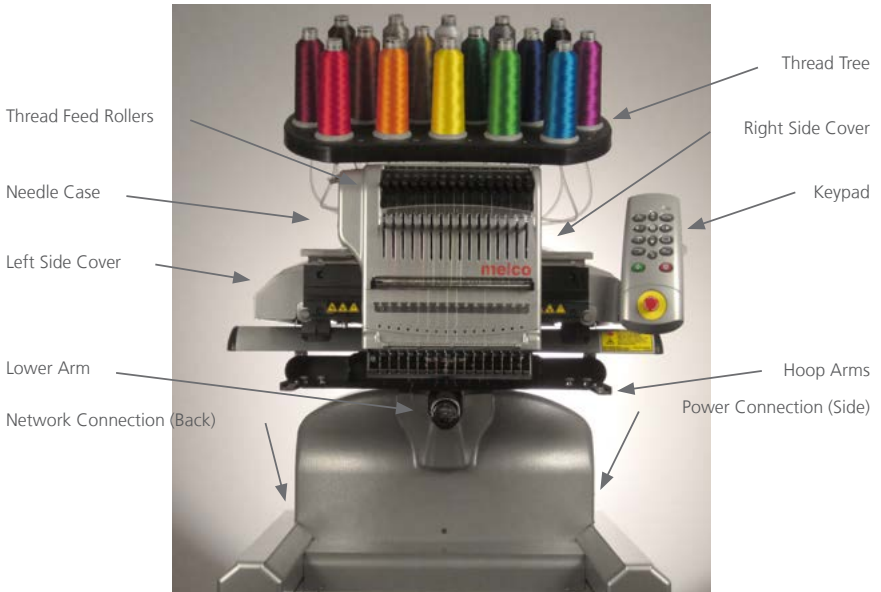

Software Activation & Deactivation

Melco OS can use a virtual security key as opposed to a physical one. This means that if no physical security key is present when you initially launch your software, you will be prompted to activate the product using the product serial number.

If a physical security key is present and attached to a USB port, this screen will be bypassed and the appropriate level of software will be launched.

Melco OS may be installed on multiple computers, but only one activated software is allowed at one time. One activation is allowed per product serial number at any given time.

Lite

If the product is not activated, it can run in Lite.


Lite is a version of the software that allows for the running of the machine, but limits are applied to sew field, sew speed, and various other settings. It will also force the software into the advanced interface.

To run in Lite, click on the Lite button on the first Product Activation page.

Product Activation

To activate the product:

1. In the initial activation page that comes up when you launch the software, enter the following information:
 - Product Serial Number - This number is most likely found on the software package. Do not lose this number.
 - Device Identification Number - This number will be generated by the software and entered for you.
 - Activation Code - If you are connected to the Internet, you may attempt to automatically obtain this number by clicking the Activate button. This is the fastest and easiest way to activate your software.

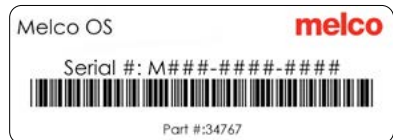

- If you are not connected to the Internet, follow the on screen instructions to obtain an activation code through an alternative Internet-enabled device.

Product Deactivation

To deactivate the software and free the license for use on another device, follow the steps below:

2. Access the product deactivation page using the following method.
 - Go to Settings>Advanced Settings>Deactivate Product



3. Follow the on-screen instructions and retain the deactivation code.

Machine Connections

This section will describe how to correctly connect the power and communications cables to the machine and the computer.

An Ethernet network connection is required for communication between the computer and the machine. This connection must be established in order to control and send designs to the machine.

The method for connecting the machine to the computer will vary depending on the number of machines.

Materials Required

To connect a machine, you will need the following items:

- 1 power cable
- 1 crossover cable OR 1 Ethernet switch and 2 Ethernet cables

Note: A crossover cable is a network cable in which the wires are crossed over. This switches the receiving and transmit signal pins on either side. If connecting directly from the machine to the computer, a crossover cable must be used.

Do Not Share Networks

The machines cannot share network communications with the internet. The computer may have access to the internet, but it must be accomplished through a separate network connection. A separate network card, either wireless or Ethernet, will need to be used for the internet connection.

Connecting the Power Cables

1. Locate the power cable you will be using with your machine.
2. Locate the power cable plug in the rear of the machine.

3. Make sure the machine power switch is in the OFF position. Plug the power cable into the inlet.



If you are using a line conditioner, as recommended, plug the other end of the cable into the dedicated line conditioner.

4. Connect the line conditioner into a power source.

Connecting the Network Cable (Single Machine)

For a single machine to computer connection, a crossover cable is required. (You can also use 2 Ethernet cables and an Ethernet switch).



1. Connect one end of the crossover cable into the Ethernet jack on the machine.




2. Connect the other end of the crossover cable into the Ethernet jack on the computer. The location of this network connection will vary from computer to computer. If using multiple network cards, it may be helpful to label them on the back of the computer.
3. Move on to Selecting the Connection.

Connecting the Network Cables (Multiple Machines)

For connecting multiple machines to the computer, an Ethernet switch device and cables are required. The switch is a small electronic device that allows multiple devices to be connected through a network. You can connect as many machines as your switch will allow.



1. Connect the Ethernet switch power cable to the switch and a power source.
2. At least two Ethernet cables are required with the switch. Connect one end of the Ethernet cable into any port on the switch.

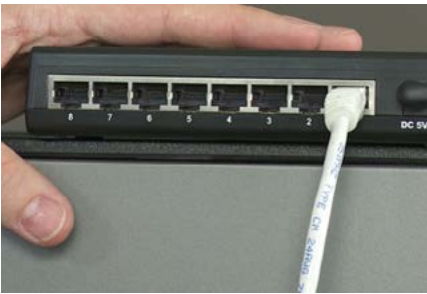


3. Connect the other end of this cable directly into the Ethernet port on the computer.
4. Now using another cable, connect one end into a different port on the switch.
5. Connect the other end into the cable port on the first machine you want to connect.
6. If there are other machines, continue to connect the next cable(s) from the Ethernet switch to the machine(s).
7. If all the machines are connected, you may now move on to Selecting the Connection.

Selecting The Connection

Before a connection can be established, the appropriate connection port must be selected in the software.



1. Launch the software by double tapping the software icon.
2. Tap the Settings button to navigate to the Settings screen.
3. Tap the Advanced Settings button to navigate to the Advanced Settings screen.

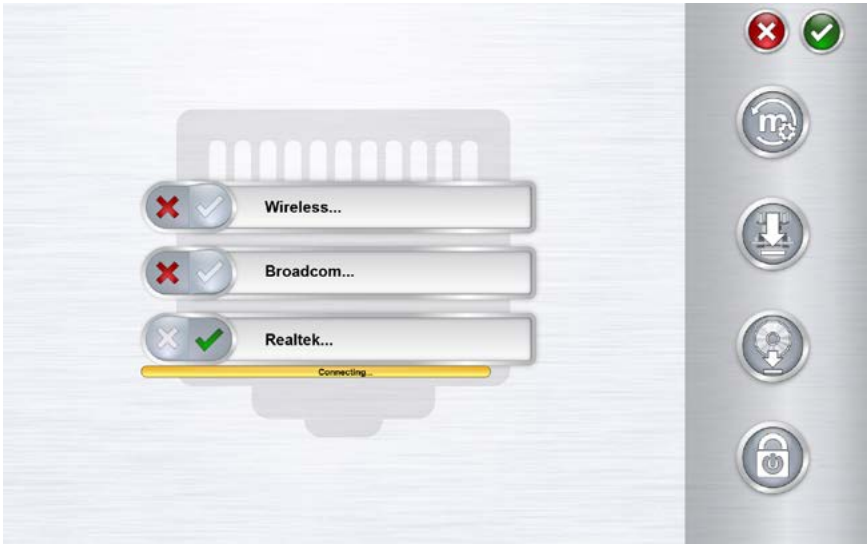

4. Select the connection the machine is going to use from the connections list by tapping the toggle to the left of the connection name. A progress bar will display the connection status.
5. As the port is connecting, move on to powering up the machine. If the machine does not completely initialize before the progress bar finishes, the status may indicate that a connection is not found. This should remedy itself after the machine fully initializes.

Powering Up the Machine

This section will describe how to correctly power up the machine.



Initial Power Up Sequence

1. Make sure that all of the machines are turned off.
2. Make sure the software the software is launched and the Main Screen is being displayed.
3. Make sure the E-Stop is disengaged by turning it in the direction of the arrows.



4. Power up the machine with the power switch.



5. The software will load CSA and RSA files to the machine, and the machine will initialize and display on screen.


Upper Threading

The proper thread path from the cone of thread to the eye of the needle is critical in the operation of the machine. Ensuring that the thread moves along the appropriate route will help prevent thread breaks as well as increase efficiency and sew quality. Understanding the upper threading will also help in troubleshooting.

The following image displays the main components of the needle case and the upper threading system.

Threading the Machine for the First Time

When you first receive your machine, there will be thread in the system. The tops of the thread will most likely be taped to the side of the thread tree. Remove the tape and untwist the threads. New cones of thread may now be placed on the thread tree using the quick thread change method below.

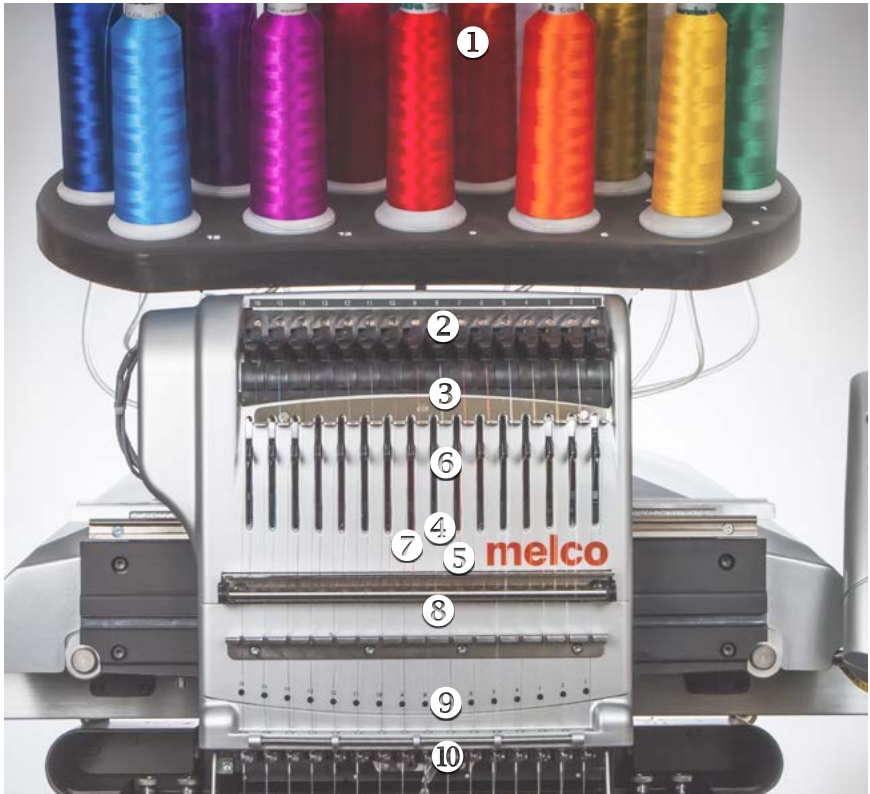

Quick Thread Change

Changing a cone of thread does not require rethreading the entire thread path. If thread is already in the system, the fastest and easiest way to change a cone of thread is to remove the old cone but leave a good length of the old thread on the machine.




1. Place the new cone of thread on the thread tree with the old thread end sticking out of the thread tube and over the new cone.



2. Extend the thread tube $\frac{1}{2}$ to 1 inch above the cone. Neglecting to extend the thread tube $\frac{1}{2}$ to 1 inch above the cone could result in frequent thread breaks.
3. After placing the cone of thread on the machine, the old thread will be trapped on the inside and underneath the cone. From near the tube, pull the thread free and over the top of the new cone.



4. Tie the end of the old thread to the end of new thread using a square knot.



5. Lift the pinch roller and carefully pull the thread from the back of the needle. This will pull the new thread completely through the system. If the knot is tight and small enough, it will even slip through the eye of the needle.



6. When finished, line up the thread under the pinch roller and press the pinch roller back down.



7. If desired, the thread can then be held by the retaining spring in front of the lower thread guide or held in place using the grabber. With your hands out of the way, press the adjustment and center keys on the keypad simultaneously to close the grabber and move the thread into the holder behind the needles.



8. Trim the end to about an inch in length.
9. Press the keys again to open the grabber.

Upper Thread Path

If the thread comes out of the system, you may need to thread the machine without a starter thread.



1. To start a new cone of thread, push the plastic thread tubes up from behind the thread tree. Place the cone of thread on the thread seat. The thread tube should extend $\frac{1}{2}$ to 1 inch above the cone. Neglecting to extend the tube $\frac{1}{2}$ to 1 inch above the cone could result in frequent thread breaks.



2. Using either the mono-filament provided in the operator's kit or a can of compressed air, feed the thread through the thread tube from the cone to the small hole behind the thread feeder assembly.
- To use the monofilament, locate the small hole behind the thread feed assembly. Push the monofilament into this hole and up through the supply tube until the end extends above the cone of thread. Then, secure the end of the thread in the notch of the monofilament and slowly pull the thread through the tube.




- If using compressed air, place the end of the thread in to the top of the thread supply tube. Feed enough that the thread will stay without holding it. Now blow the compressed air into the tube. The air will carry the thread and shoot out the front of the machine.


- Using the black tab just in front, lift the pinch roller.




- Pull the thread from the hole and place it under the pinch roller. Bring the thread down through the upper thread guide.

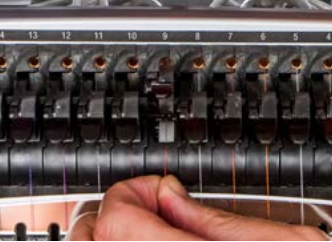

- Pull the thread down to the middle thread guide. Of the three holes, push the thread from the top through the back right hole. Make sure the thread is on the right side of the take-up lever.

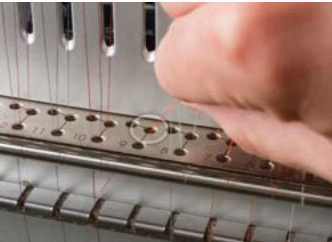


- Bring the thread around the thread sensor from back to front and up through the front hole of the middle thread guide.

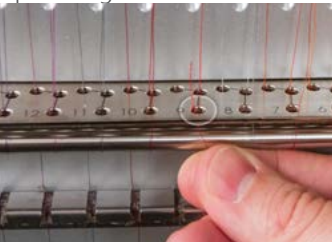


7. Pull the thread up and through the eye of the take-up lever from right to left.




8. Route the thread straight down through the back left hole in the middle thread guide.

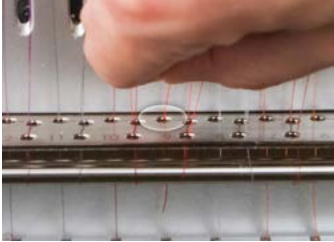


9. Press the thread into the felt restraint and feed it down through the lower thread guide.

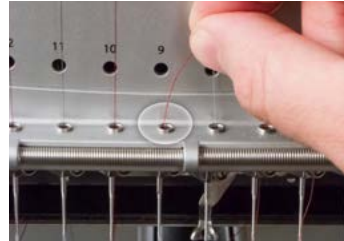


10. Thread the needle from front to back. Cutting the end of the thread may allow it to more easily pass through the eye.

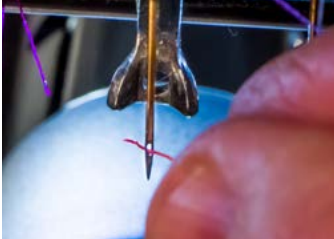

11. Be sure to align the thread with the small v-notch in the thread feed cover.

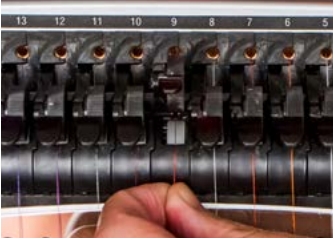

12. Press the black tab to lower the pinch roller.
13. If desired, the thread can then be held by the retaining spring in front of the lower thread guide or held in place using the grabber.

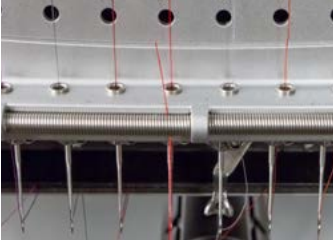


With your hands out of the way, press the adjustment and center keys on the keypad simultaneously to close the grabber and move the thread into the holder behind the needles.



Press the keys again to open the grabber.

14. Trim the end to about an inch in length

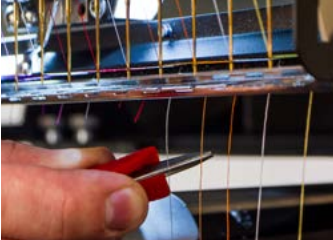

Bobbin Threading and Tensioning

The proper bobbin tension and installation also play an integral role in the quality and efficiency of an embroidery sewout.



What Type of Bobbin?

For the best results with your machine, use Style L continuous polyester filament bobbins.

Removing the Bobbin Case

CAUTION: Never attempt to remove or insert the bobbin while the machine is in operation.



The bobbin case can be removed from the lower arm of the machine by locating the release lever on the bobbin case.

Pull forward on this lever until the case is free from the machine.
Remove the old bobbin from the case.

Cleaning the Bobbin Case

It is recommended that you clean under the tension spring of your machine bobbin case every time you change the bobbin.


Lint and bobbin wax can build up under the spring, and this can affect bobbin tension. This, in turn, will have an impact on sew quality (loose bobbin, bobbin showing on front side of sew out, thread breaks, false thread breaks). To clean under the spring, slide a corner of a small piece of paper under the tension spring in the same direction the thread travels. While cleaning under the tension spring, be careful not to bend the spring.

After cleaning the bobbin case, blow the case out with compressed air. It is also recommended that you check the bobbin tension.




Inserting a New Bobbin in the Bobbin Case & Checking the Tension

1. Hold the bobbin case with the front facing down and the open end facing up.
2. Hold the new bobbin with the thread coming over the top and to the right in a clockwise fashion. It should look like a number nine (9).
3. Without flipping the bobbin, drop it into the bobbin case.
4. Route the thread through the thin slot opening and under the tension spring. The bobbin thread should not be releasing from the side of the case.
5. To check the tension of the bobbin, hold the bobbin thread with one hand. As you gently bounce the thread, the bobbin case should drop.
 - For EMT16X, XTS, and XT: It should drop 1" - 2" or 2.5-5cm.
 - For EMT16 and EMT16 PLUS: At most, it should drop a half inch / 13 mm.
6. If the tension is incorrect, use a flat-blade screwdriver to turn the larger adjustment screw clockwise to tighten or counterclockwise to loosen the tension.

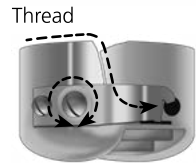

Adjustment Screw

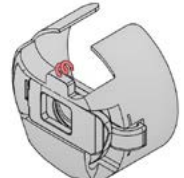

Pigtail Shown in Red


This test must be completed BEFORE winding the thread through the pigtail.

7. Once the tension is set, wind the thread through the pigtail.

For a more accurate test of the bobbin tension, use a bobbin tension gauge.

Bobbin Case Tension Gauge

Overview

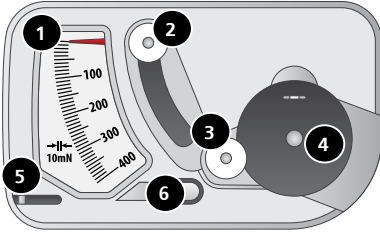


1. Indicator
2. Second Pulley
3. First Pulley
4. Bobbin Case Set Position
5. Thread Cutter
6. Thread Take-up


Using the Gauge

1. Clean and thread the bobbin case as you normally would.
2. Pull the thread through the tension spring, but do not pull the thread through the pigtail.
3. Insert the threaded bobbin case into the tension gauge with the extended portion of the latch falling into the guide as shown in red.
4. Route the thread through the two pulleys and the take up as shown in red.
5. Pull the thread gently and smoothly in the direction of the arrow at a rate of approximately an inch per second. Doing this will cause the second pulley to move down and with it, the gauge indicator. Watch as you pull for where the indicator is when the bobbin is starting to turn.


- For EMT16X, XTS, and XT: The ideal setting for bobbin tension for embroidery is between 150 and 190.
- For EMT16 and EMT16 PLUS: The ideal setting for bobbin tension for embroidery is between 180 and 220.

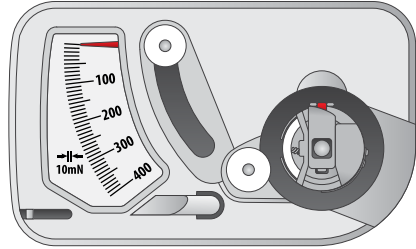

Step 3

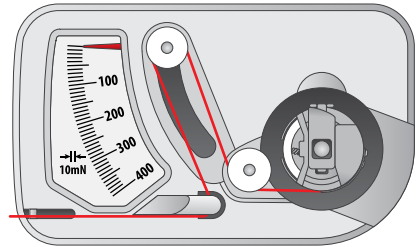


Step 4

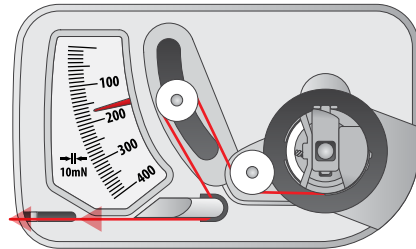

Step 5


Adjusting Bobbin Tension

1. To adjust the tension, access the adjustment screw (larger of the two) on the tension spring from the recessed corner of the gauge.
2. Using a small flat blade screw driver, turn the adjustment screw in small increments between testing. Small rotations can make large adjustments to the tension.
 - Clockwise: This increases the tension on the bobbin thread.
 - Counter Clockwise: This decreases the tension on the bobbin thread.

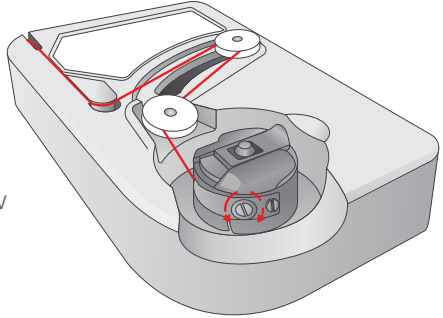

Other Instructions

Note: Extra thread may be trimmed away using the thread cutter located below the indicator.

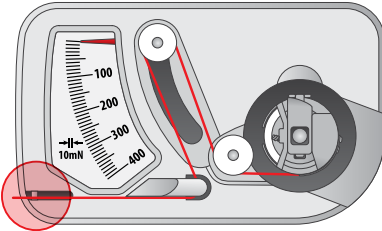


This device is a precise measuring apparatus that has been carefully tested and adjusted. Do not drop, hit against another body, or disassemble it.

Avoid gauge contact with thinner oil, benzine oil, alcohol, and/or petroleum.


Inserting the Bobbin Case

CAUTION: Never attempt to remove or insert the bobbin while the machine is in operation.

1. Insert the bobbin and case in the machine with the pigtail facing up. Push on the bobbin case until it snaps into place.
2. Test the bobbin orientation by pulling on the thread. The bobbin should rotate counter-clockwise.

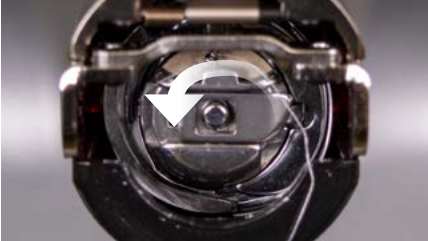

3. Trim the thread to 2 - 3 inches.

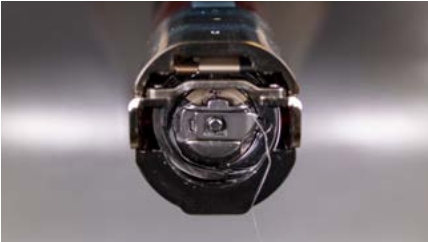





NOTE: If the thread is cut too short, it will not pick up on the stitch. If the thread is left too long, it may wrap into the machine.

Initial Maintenance

The first time the machine is powered on, it is highly recommended that an initial maintenance be performed. To step through this maintenance,



1.  Press the Settings buttons to access maintenance.
2.  Press the Maintenance button to go to the maintenance menu in the software and perform the following maintenance procedures.
 -  Hook Maintenance
 -  Weekly Maintenance

Each section will walk you through the maintenance procedures and move the machine to the appropriate positions for each step.

The maintenance screen may appear automatically when first starting your machine. It is recommended to perform any procedure that shown with a clock. This image indicates that a procedure is due.

User Interface

In the following sections, you will become more familiar with the operating software for your machine. The next sections will walk you through the loading of a design and how to set machine settings such as color sequence.



Main Screen Overview



The Main Screen is divided into three sections. Largest portion of the screen is devoted to a preview of the design in the selected hoop. This is meant to give the user an understanding of placement within the hoop and color selection.

Below the preview is the machine status. This will display the time, stitch count, and file name of the design that is loaded to the selected machine.

The right side of the screen gives access to the software commands and settings. Here you will find operations such as loading a design or moving the design within the hoop. At the bottom of this section, you have access to the Help documentation and the Settings & Maintenance screen.

Machine Status

Both the status bar and the machine button can indicate machine status. The various status colors and their meanings are listed below.



Silver - indicates that the machine is in a load-ready state. This is the only state from which you can load a design to the machine. This is also the only state in which multiple machines can be selected.



Green - indicates that the machine is in the process of running a design. If the machine status is green, the status bar will display the file name as well as the time and stitch count.



Yellow - indicates that the machine requires your attention. This could be due to a variety of reasons ranging from an Appliqué command to a thread break. If the machine status is yellow, the status bar will display the reason why.



Red - indicates that an error has occurred or the emergency stop button has been pressed. If the machine status is red, the Status Bar will display the reason why.



Clock - Maintenance is due on this machine.

Selecting Machines

If multiple machines are connected and communicating with the software, you will need to select the machine that you want to view or change settings for.

By pressing the numbered machine button below the Status Bar, you will shift focus to that machine. The Status Bar will then display the status of that machine.



Selecting Multiple Machines

When multiple machines are in a load-ready state, they can be selected at the same time. This allows you to simultaneously load the same de-sign to multiple machines.

In order to select multiple machines, the machine with focus must be in a load-ready state. If this is the case, any other machines in a load-ready state will gain a small plus (+) sign beside them.

Adding Machines to the Selection

Pressing this button will add them to the selected group. Any machines within the selected group will be shown with an extension of the status bar behind them as well as the option to remove them from the group.

Removing Machines from the Selection

To remove a machine from a group, press the minus (-) button beside the machine. This will cause the machine to be removed from the selection group. The extension from the status button will be removed, and the option to add the machine to a selection group will return.

Disband a Selection

The selection group can be broken in a couple ways.

- Press the start button on any machine in a selection group to start the machine sewing and disband the group.
- Shift focus to any machine outside of the selection group to disband the group.

Loading A Design




To load a design, press the Load Design button. Note that this button will only be available if the selected machine is in a load-ready state.



If it is in the middle of a design, the button will give you the option to reset the design.

Pressing the Load Design button will bring you to the Load Design screen.

Load Design Screen

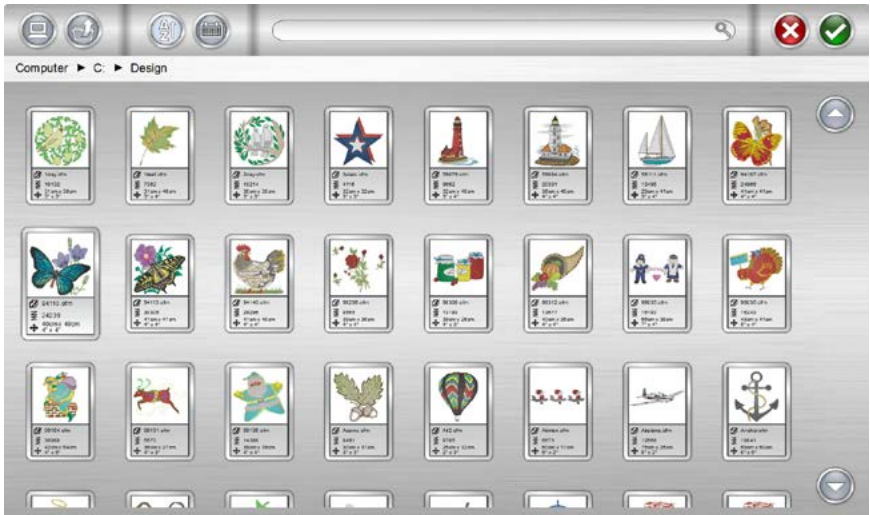

From the Load Design screen, you can navigate to your design files on any drive connected to your computer. Press the design that you would like to select. Selected designs will be indicated by a slightly enlarged and darker appearance.

Confirm Selection



Press the Confirm button to confirm your selection, exit the load design screen, and load the file to the machine.

Double-tapping the file will also confirm and load the file to the machine.

Cancel Load Design



Press the Cancel button to exit the load design screen without loading a new design to the machine.

Navigation



The Home button will take you back to your computer.



The Level Up folder will take you to the parent folder of the current folder shown.

Breadcrumbs provide a path of drives and folders for you to navigate back in your computer. Pressing any of these folders or drives will display their contents.

Computer ► Local Disk (C:) ► Designs

Search

The Search Bar allows you to search for a file name within the current folder. Typing in this bar will automatically begin to filter the results.

Pressing the Clear button on the right side of the bar will clear the Search Bar and return all files from the folder or drive to the window.



Sorting



The files displayed can be sorted by name or by date. The two sort buttons will toggle between the different options. The files may be sorted from A to Z or Z to A. They may also be sorted with from the newest to the oldest or the oldest to the newest.



Resetting a Design



After a design has started sewing, the Load Design button will be replaced with a Reset Design button.

Press this button to move to stitch zero and reset the design completely. After a design has been reset, a new design can be loaded, or the same design can be sewn again from stitch zero.

The Reset Design button is only available when the machine is no longer in a load-ready state.



Move & Rotate

To move or rotate a design in the hoop or move to a specific stitch or color, press the move button. This button will be unavailable when the machine is sewing.



Moving

Moving Around the Hoop



Pressing any of the arrow keys will move the hoop on the machine and result in the design moving within the hoop in the direction the arrow was pressed.

Similar functions can be used on the keypad of the machine. The changes will be reflected on screen. See the keypad section of this manual for more information.

Centering



Pressing the Center button will center the hoop on the machine. If the design was centered on the origin when it was created, this will also center the design in the hoop.

Similar functions can be used on the keypad of the machine. The changes will be reflected on screen. See the keypad section of this manual for more information.

Hoop Out/In



Pressing the Hoop Out button will move the hoop forward on the machine as far as it can go with the needle remaining within the hoop limits. This allows for easier access to the material or garment and can ease access to the bobbin on a closed product like a bag.



When in the out position, the only operation available is to move the hoop back in.

Rotating A Design



Pressing the 90° button will rotate the design 90° clockwise.



Pressing the 180° button will rotate the design 180° clockwise.



To rotate the design by specific degrees, enter the desired rotation into the field. Pressing the Negative button will rotate the design by the specified amount counter-clockwise. Pressing the Positive button will rotate the design by the specified amount clockwise.


Move to Color



To move through a design without stitching and move to a specific color press the plus or minus button to move forward or back a color from the color displayed in the box.

Similar functions can be used on the keypad of the machine. The changes will be reflected on screen. See the keypad section of this manual for more information.

Move to Stitch



To move to a specific stitch number without sewing, enter the desired stitch number and press the move to stitch button.

Laser Alignment (Design Registration)

The Laser Alignment feature allows you to line up an embroidery design to a mark, such as a stripe, on a garment.















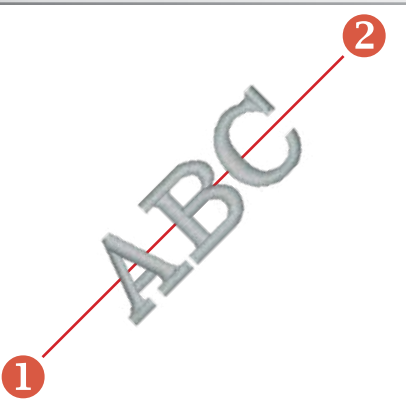

Perform the following steps to use the Laser Alignment feature:

1. Use the Hoop and Arrow key to move the laser to your first reference point (for example, the top of the stripe on the left side).
2. Press the Laser and Arrow key to confirm this point.
3. Move the laser with the Hoop and Arrow keys to your second reference point.
4. Press the Laser and Arrow key to confirm this point.
5. Press the Laser and Center key. The design aligns to the line created by your two reference points.

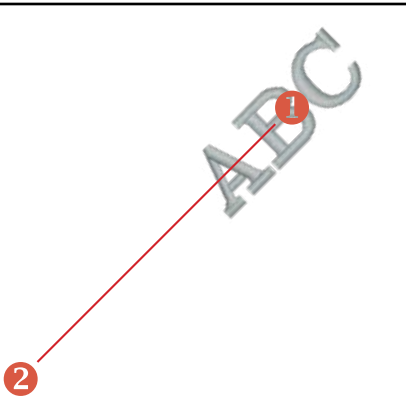The placement of the design along the line depends on the Arrow keys used to input the reference points and the position of the design elements to the design origin. The variations follow:

This feature uses the design origin to determine how to rotate.

Desired Alignment	Keypad Commands
	<p>Design to Left of the Line:</p> <ol style="list-style-type: none"> 1. Laser + Left: + 2. Laser + Right: + 3. Laser + Center: +

Desired Alignment	Keypad Commands
	<p>Design in the Center of the Line:</p> <ol style="list-style-type: none">1. Laser + Left:  + 2. Laser + Left:  + 3. Laser + Center:  + 
	<p>Design to Right of the Line:</p> <ol style="list-style-type: none">1. Laser + Right:  + 2. Laser + Left:  + 3. Laser + Center:  + 

Color Sequence

From the Main Screen, the Color button will display the needle that the machine is currently on. Pressing the Color Sequence button will allow you to set or edit a color sequence. This button will only be able to be pressed when the machine is stopped.



Color Sequence Screen

The main Color Sequence Screen displays a representation of the machine thread tree, a preview of the design, the color sequence, and machine commands or effects that you can add to the color sequence.

As the color sequence is altered, the design preview will change to reflect the new sequence.

The easiest way to get started is to first assign colors to the thread tree as described in the next section. Colors should be assigned to the thread tree in the software after thread cones have been physically placed on the machine and the upper threading has been completed.




Setting Up the Thread Tree

When the software is first loaded, the thread tree will be displayed in grey. To assign appropriate colors to the tree, double-tap on the thread cone to be changed. This will bring up the thread cone assignment screen.



Thread Cone Assignment Screen

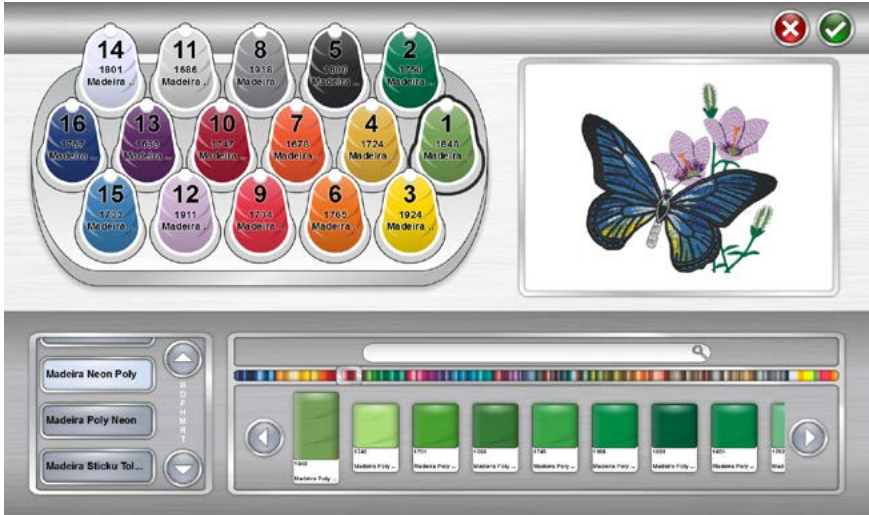

The thread cone assignment screen shows the same representation of the thread tree and preview of the design as the previous screen. The second half of the screen is now dedicated to the specific thread colors on the machine.

A thread catalog is chosen on the left and the specific thread color is chosen on the right.

Assign a Thread Color to a Needle

To assign a color to a needle:

1. Select the needle/cone that you wish to assign the new color to. Do this by clicking or tapping the cone on the thread tree at the top of the page. The selected cone will then be highlighted.

2. Select the thread catalog that contains the desired thread color. Scroll by pressing the up or down arrow. You can skip to an area by pressing on the desired section of the alphabet between the arrows. Once located, press the thread catalog to select it.
3. With the appropriate thread catalog selected, find the specific thread from the display on the right. Scroll by using the arrow buttons, skip to an area with the scrubber, or use the Search Bar to find the thread by name or number.
4. Select the thread by clicking or tapping it. Once selected, it will be highlighted and the cone on the thread tree will be changed to reflect the selection. If the cone is being used in the color sequence, the design preview will also change to reflect the new thread color.
5. To continue, select the next cone/needle to be changed or confirm or cancel to exit the screen.

Searching for a Thread Color



The Search Bar can be used to search for a specific thread color in the selected thread catalog. Typing in the Search Bar will immediately begin to filter the contents of the window below.

Thread colors may be searched by color number or name.

Pressing the clear button on the right side of the bar will clear the Search Bar and return all colors from the catalog to the lower window.

Confirm Thread Tree Colors



Press the Confirm button to confirm the thread tree colors, exit the Color Assignment Screen, and return to the Color Sequence Screen.

Cancel Thread Tree Colors



Press the Cancel button to return to the Color Sequence Screen without saving the new color assignments.

Setting the Color Sequence

With the thread tree appropriately colorized, setting the color sequence will be easier and far more representative of the final sew-out.



The color sequence displays two colors for every color block. The lower sliver of color is a representation of the color information stored in the embroidery file. The upper swatch of color represents the color currently set to sew that color block.

To set the color sequence:

1. Select the color block from the sequence that you wish to assign to a needle/cone. Select the color block by pressing it. The color sequence is displayed at the bottom of the screen. Once selected, the color block will be highlighted. The color information stored in the file will be displayed below the swatch.
2. Select the cone/needle that you would like that color block to be sewn with. Do this by clicking or tapping on the cone on the thread tree above. The selected cone will be highlighted.
3. The color block will change color to match the thread cone/needle that was selected and the needle number will be displayed in the swatch. The color information of the newly selected thread will be displayed above the swatch. The design preview will also change to match the new color sequence.

4. Continue in the same manner by first selecting the color block you wish to assign to a cone/needle and then selecting the cone/needle.

Use the arrow buttons to move forward and back through the sequence.

Confirm Color Sequence



Press the Confirm button to confirm the color sequence, exit the Color Sequence Screen, and return to the Main Screen.

Cancel Color Sequence



Press the Cancel button to return to the Main Screen without saving the new color sequence.

Adding Machine Commands to the Sequence

Machine commands can be added to the color sequence to make designs a bit easier to sew. For example, on an especially stitch-heavy design, a Pause command may be placed in the middle to have the machine stop and wait for the embroiderer to change the bobbin. This would prevent the machine from running out of bobbin thread in the middle of a critical design element.

Appliqué



The Appliqué command is placed in between color blocks. This will cause the machine to move the hoop out as far as possible with the needle still within the hoop limits.

This command is often placed after the placement stitch in an appliqué design. This allows the embroiderer to have easier access to the material without taking the hoop off of the machine. It also stops the machine automatically instead of the embroiderer watching the sew-out to stop the machine and place the appliqué material.

After an Appliqué command has stopped the machine, starting the machine will move the hoop back into place and continue sewing the design.

To place an Appliqué command into the sequence:

1. Locate where in the sequence you would like the machine to stop.
2. Drag the appliqué icon down into the color sequence where needed. Notice that the color blocks will shift to either side to allow room for the command.
3. Release the appliqué icon. The command is now in the color sequence.

To remove an Appliqué command from the color sequence:

1. Drag the Appliqué command up away from the color sequence.
2. Once off of the sequence, release the command to delete it.

Pause



A Pause command can be inserted between color blocks in a color sequence. This will cause the machine to stop and wait to be restarted, but it will not move the hoop forward.

To place a Pause command into the sequence:

1. Locate when in the sequence you would like the machine to stop.
2. Drag the Pause icon down into the color sequence where needed. Notice that the color blocks will shift to either side to allow room for the command.
3. Release the Pause icon. The command is now displayed in the color sequence.

To remove a Pause command from the color sequence:

1. Drag the Pause command up away from the color sequence.
2. Once off of the sequence, release the command to delete it.

Repeat



A Repeat command can be inserted between color blocks in a color sequence. This will cause the machine repeat the color sequence preceding the command until no color blocks are left in the design.

Making changes to the sequence preceding the command will also affect the repeated sequence.

To place a Repeat command into the sequence:

1. Locate when in the sequence you would like the machine to stop.
2. Drag the Repeat icon down into the color sequence where needed. Notice that the color blocks will shift to either side to allow room for the command.
3. Release the Repeat icon. The command is now displayed in the color sequence.

To remove a Repeat command from the color sequence:

1. Drag the Repeat command up away from the color sequence.
2. Once off of the sequence, release the command to delete it.

Adding Effects to a Color Block

Effects can be added to a color block to assist in the embroidering of three dimensional foam and micro chenille-like effects. These effects will alter the sew settings only for the color blocks onto which they've been applied.

Typically, designs will need to be digitized with specific settings to fully take advantage of these effects.

3D Foam Effect



Adding 3D Foam effect to a color block will alter the sew settings for that color block. It will also feed extra thread to better accommodate the foam.

To place a 3D Foam effect onto a color block:

1. Locate the color block in the sequence you would like to have the 3D Foam effect.
2. Drag the 3D Foam icon down onto the color block where needed.



Use this option for thinner foam.



Use this option for thicker foam.

4. Release the 3D Foam icon. The effect is now overlaying the color block.

To remove a 3D Foam effect from the color sequence:

1. Drag the 3D Foam effect off of and away from the color block.
2. Once off of the color block, release the effect to delete it.

Often color blocks with the 3D Foam effect applied are preceded by a Pause command for the embroiderer to place the dimensional foam. It is also common to follow the effect with a Pause command to remove the dimensional foam from the embroidered good.

No other adjustments to material thickness are necessary.

Looping Effect



Adding the Looping effect to a color block will alter the sew settings to feed extra thread and cause the stitches to loop. When coupled with a design that is digitized for this effect, it can create a micro chenille-like look.

To place a Looping effect onto a color block:

1. Locate the color block in the sequence you would like to have the Looping effect.
2. Drag the Looping icon down onto the color block where needed.



Use this option for thicker thread like a wool blend.

3. Release the Looping icon. The effect is now overlaying the color block.

To remove a Looping effect from the color sequence:

1. Drag the Looping effect off of and away from the color block.
2. Once off of the color block, release the effect to delete it.

No other adjustments to material thickness are necessary.

Hoop Selection

From the Main Screen, the Hoop button will display the hoop that is currently selected. Pressing the Hoop button will allow you to select a different hoop. This button will only be able to be clicked or tapped when the machine is stopped.



Pressing the Hoop button will bring up the hoop selection screen. This screen will display the hoop types and sizes. Selecting the appropriate hoop is critical in ensuring that hoop limits function properly.



Hoop Shape/Type

Select the hoop shape/type from the list on the right of the screen. Select the type by clicking or tapping it. The selected type will be highlighted and the catalog of hoops will display on the left.

Hoop Size

After selecting the shape/type of hoop, select the size of hoop from the catalog on the main portion of the screen. Each hoop displays the dimensions and part numbers. Select the hoop by clicking or tapping it. Once selected, it will be highlighted.

Confirm Hoop



Press the Confirm button to confirm the hoop, exit the hoop selection screen, and return to the Main Screen.

Cancel Hoop



Press the Cancel button to return to the Main Screen without saving the new hoop.

Choosing the Appropriate Hoop for the Job

Hooping a garment properly and selecting the right hoop for the job is essential to quality embroidery production. The hoop provides the means to move the product at high speeds and accurately place the stitch. If the hoop is too loose, the wrong size, or if the product is hooped poorly, it can adversely affect the embroidery quality.

Choosing the Appropriate Hoop Shape

Each hoop shape has benefits and drawbacks.

Hoop Shape	Benefit	Drawback
Traditional Round	Even tension across the fabric. Great hoop for most left-chest designs.	Limited number of sizes. Larger hoops must be used for square-shaped designs.
Traditional Square	Larger sew fields.	Tension is tighter in the corners and looser on the edges.
Specialty (clamps and other frames)	Tend to be easier to hoop quickly. Better for difficult to hoop materials and/or placements.	Does not hold the material as securely as a traditional style hoop.

Choosing the Appropriate Hoop Size

The ideal hoop for an embroidery design is one that just fits. The design should fall just within the hoop limits. This removes the influence of excess material from around the design and can help with registration (lining up), puckering, and overall stitch quality.

Occasionally there will be obstacles to using the smallest hoop possible for a design. It could be that a button is in the way, or a seam would fall right into the hoop. Adjusting your hoop size to better accommodate the material may be necessary.

Hoop Construction

Some of the larger hoops come in either wood or plastic. The wooden hoops are double walled and have more grip than the plastic. However, the inner and outer wooden hoop must remain aligned. The outer hoop cannot be rotated for easier hooping or tightening. Each set of hoops will have a registration number printed on both hoops to help keep them aligned.

Specialty Hoops

Specialty hoops such as clamps and frames that use adhesives are useful when dealing with difficult placements on garments or materials that are hard to hoop.

As they rarely provide the same hold on the materials as a traditional hoop, these hoops tend to be reserved for more specialized applications.

Material Thickness

Choosing the relative thickness of the material being sewn will help improve sew quality.



The Material Thickness setting is shown just below the Material Thickness button.

Selecting a Material Thickness



To choose the Material Thickness, press the Material Thickness button. This will bring up the material thickness screen.

Select the material that best corresponds to the material to be sewn. Fine adjustments can be made from the Main Screen. Select the material by clicking or tapping it. The selected material will be highlighted.



Confirm Material Thickness



Press the Confirm button to confirm the material thickness, exit the material thickness screen, and return to the Main Screen.

Cancel Material Thickness



Press the Cancel button to return to the Main Screen without changing the material thickness.

Adjusting Material Thickness

Adjustments to the material thickness can be made by clicking or tapping on either the plus or minus button to either side of the material thickness setting.



Finding just the right settings for your material thickness is not always necessary, but it can make a marked improvement in sew quality and machine performance.

Sew quality and thread breaks are indicators of appropriate or inappropriate thread feed. Those symptoms are listed in sections below.

Material Thickness Value is Adequate When...

The material thickness does not need to be adjusted when:

- Satin and fill stitches - There is no looping or pulling on the top of a sew-out when sewing satin and fill stitches.
- Satin stitches - On the back side of the sewout, you can see 1/3 of bobbin showing in the middle of columns and the top color for the remainder around the sides.
- Fill Stitches - On the back of the sew-out, the top thread is even along the edge.

Increase Material Thickness When...

When not enough thread is being fed into the design, you need to increase the material thickness value. If you experience any of the following problems, you may need to perform this adjustment.

- Satin stitches - You are encountering thread breaks and you can see bobbin thread on the top of the design.
- Satin stitches - Too much bobbin is showing on the back of the design.
- Fill stitches - You can see bobbin thread on the top of the design.
- Fill stitches - There is not enough top thread showing on the back of the design.
- Registration Loss - If designs are not lining up when sewn and the cause is the thread being pulled way too tight, increasing the Material Thickness may help. Using a stable backing will also help.

Decrease Material Thickness When...

When too much thread is being fed into the design, you need to decrease the material thickness value. If you experience any of the following problems, you may need to perform this adjustment.

- Satin stitches - The stitches in the design are looping.
- Satin stitches - Not enough bobbin is showing on the back of the design.
- Fill stitches - You are encountering thread breaks and the stitches in the design are looping.
- False Bobbin Breaks - When the software detects bobbin breaks that are not really breaks, it could be that your material thickness is too high.

Machine Speed

The machine speed is displayed on the Main Screen. This reflects the maximum speed that the machine will run. The machine may automatically slow for longer stitch movements in X, Y, or now Z. Longer stitches, as well as higher thread feed values, may affect speed.



Changing Machine Speed

The machine speed may be altered by clicking or tapping the plus or minus button on either side of the speed setting.

Similar functions can be used on the keypad of the machine. The changes will be reflected on screen. See the keypad section of this manual for more information.

Machine Speed Suggestions

While the embroidery machines have extremely fast sew speeds, these speeds may need to be changed depending on the products or designs you are planning to embroider.

When the machines start to sew, they will begin slowly and then rapidly speed up after the thread has had a couple of stitches to catch.

The machine will sew at the set sew speed if it is possible. However, design factors may cause the machine to slow down. Longer machine movements and stitches will cause this. If you hear the machine changing speeds constantly, you may want to lower the set sew speed to even out sew quality.

Machine Speed	Application
850-1000 s.p.m.	Sewing using the Wide Angle Driver used for caps and micro (pocket) clamps. Designs using metallic or specialty threads.
1000-1200 s.p.m.	Finer detailed designs, smaller lettering.
1200-1500 s.p.m.	Faster production.

These sew speeds are meant as guidelines and should be adjusted as needed.

Symptoms from Sewing too Fast

Sewing at too high of speed can result in a few undesirable outcomes. These would include:

- Thread breaks
- Bobbin pulling to the top
- Poor registration of designs (design details or outlines don't line up)


These symptoms can also be caused by other settings or applications. However, if you experience one or more of these symptoms, adjusting your sew speed could be a possible solution.

Settings



Pressing the Settings button on the Main screen will bring up the Settings screen. From here machine settings may be set or sub-menu may be accessed.

Closest Color Match on Load



When enabled, this feature will use the color information stored in an embroidery file to set the color sequence with the appropriate colors. It will use the closest color match that it can find with the colors currently assigned to the thread tree.

Not all embroidery files contain color information and some may load without.

The green check indicates enabled, the red "X" indicates disabled.

Bobbin Detect



This settings determines if the machine will detect bobbin breaks or not. Certain applications may be prone to disrupting the thread sensor and producing false breaks. For these applications, it may be easier to disable this feature.

The green check indicates enabled, the red "X" indicates disabled.

Wide Angle Driver Color



Different wide angle drivers exist on the market and they have different offsets from the machine origin. To accommodate this, choose the wide angle driver color that model that came with your machine. The model is indicated by the color of the cylinder. As the settings are machine specific, only one driver color may be enabled at a time.

The green check indicates enabled, the red "X" indicates disabled.

Presser Foot Adjustment



The Presser Foot Adjustment button will lower and raise the needle to allow for easier adjustment of the presser foot. For more information on the adjustment of the presser foot, see that section.

Maintenance



The Maintenance button opens the maintenance screen. The maintenance screen will also open when maintenance is due. From here the hook, weekly, monthly, and quarterly maintenance procedures may be initiated. Procedures that are due are indicated by a clock icon.

Each procedure will show a walk-through with images and text as well as move the machine to the appropriate position for each step.

Advanced Settings


Advanced Settings Button



Pressing the Advanced Settings button in the settings window will switch to the Advanced Settings screen. This is where a connection can be selected. See below.

Connections

The connections portion of the Advanced Settings screen is used to select the appropriate connection for your machine. Once selected, a progress bar will indicate the checking for a connection.

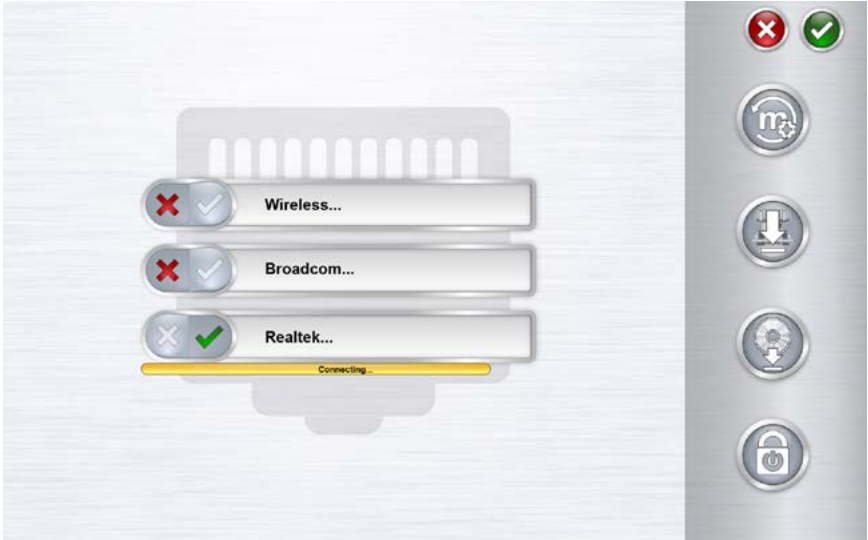

Restart in Melco OS Advanced Interface



The Melco OS Restart button will close the user interface screen and reopen in a more advanced interface. If you would like to return to the simplified user interface, go to Tools>Restart in Melco UI.



Machine Reset



The Machine Reset button will prompt you to cycle the power on your machine. When the machine reconnects with the software, the software will push a fresh set of run files to the machine. This will essentially reset your machine. This function is usually only used when prompted by customer support.

Check for Update



The Check for Update button will launch a browser and connect to the Internet (connection required) to see if a newer version of the software is available. If it is, a download link is shown, and the installation of the software will be performed in the same manner as the initial installation. Installation guides and requirements are also provided on the download page.

Deactivate Product



The Deactivate Product button will launch a window to walk through the product deactivation process. This will free up a license so that the software may run on another device. The next time the software is launched, an activation window will appear.

Hooping

Hooping the fabric or garment securely is important to the quality of the embroidery. This section will walk you through the adjustment of the hoop tension as well as the hooping process.

Adjusting the Hoop Tension

You will need to adjust the tension of the hoop any time you change to a drastically different material. For example, changing from a T-shirt to a sweatshirt would require a change in hoop tension.



1. Start with a clean flat working surface. Remove clutter from the area. Do not hoop on an uneven surface or stack of shirts.
2. Use an appropriate hoop for your design. For more information, read the section on choosing an appropriate hoop.
3. Loosen the tension on the outer hoop ring by turning the adjustment screw counter-clockwise.



4. Place the outer hoop ring inside the garment.
5. Slide the appropriate backing between the outer ring and the hoop.
6. Smooth the fabric over the hoop.
7. Gently align the inner hoop with the outer hoop, sandwiching the backing and a single layer of the garment. The mounting brackets should be facing up.
8. Press the hoop down and into place. It should go fairly easily. Take care to press on the ring rather than on the arms.

Pressing on the arms can bend the hoop out of shape or break it.

9. Reach inside the garment and tighten the outer hoop by turning the adjustment screw clockwise. Tighten the hoop to finger-tight.



10. Now, without loosening the screw, remove the hoop from the garment.
11. Tighten the adjustment screw a turn or two more.
12. The outer hoop is now adjusted.

The appropriate tightness of a hoop can be tested by tapping rapidly with moderate pressure on the fabric inside the hoop. By doing this, you can mimic the presser foot of the machine. If material walks into the hoop, the hoop is too loose and needs further adjustment.

Hooping the Garment or Fabric

With the hoop properly adjusted, the garment can be hooped.



1. Start with a clean flat working surface. Remove clutter from the area. Do not hoop on an uneven surface or stack of shirts.
2. Use an appropriate hoop for your design. For more information, read the section on choosing an appropriate hoop.
3. Place the properly tensioned outer hoop ring inside the garment.
4. Slide the appropriate backing between the outer ring and the hoop.
5. Smooth the fabric over the hoop.




6. Gently align the inner hoop with the outer hoop, sandwiching the backing and a single layer of the garment. The mounting brackets should be facing up. The notch in the mounting bracket will face the machine when the hoop is loaded onto the machine.
7. Using the hoop arms as a guide, make sure that the hoop is level to the garment. This will help prevent sewing a design crookedly on a product.



8. Press the hoop down and into place. Take care to press on the ring rather than on the arms. Pressing on the arms can bend the hoop out of shape or break it.

melco

- It may be helpful to start by placing one hand just below and off of the outer hoop to stabilize and smooth the fabric.
- Try to hoop in a smooth motion. If the hoop rocks back and forth, extra material will move into the hoop and diminish the quality of the embroidery.
- Do not overstretch the material. Stretching the material will stretch and distort the sew-out. It can also lead to puckering.

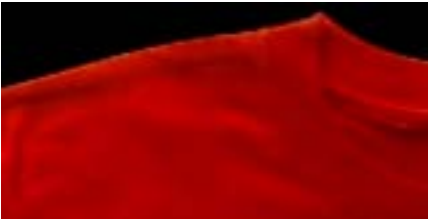

9. Once the material has been hooped, make sure that the garment is smooth, flat, and taut. If the garment is loose, you may need to remove the hoop and adjust the hoop tension or hooping method.



10. Check the back of the hooped piece. Make sure that there are not wrinkles or other parts of the garment lodged in the hoop.
11. As a final step, check the hoop for placement accuracy and straightness.

Hooping Tips

Round hoops give the most even tension of all the hoop shapes.

Wooden hoops will have registration marks on them. These help maintain the shape and hold of the hoop.

Many wooden hoops are double-high, meaning their sides are twice as tall as normal hoops. They help grip slick or bulky goods because of the larger surface area and slight tooth the wood provides.

Choose the smallest hoop that the design will fit in without going over the hoop limitations.

Adjust the hoop tension before hooping the final garment. If you adjust the tension of the hoop while the garment is in it, you will increase your chances of “hoop burn” and create ripples in the garment.

Sew a Swatch!

It is often a good idea to sew a practice piece on material as similar to the final product as possible. Although not essential, producing a sample is an excellent way to prevent or solve potential problems before embroidering the final product.

Working With Different Fabrics

Different fabrics and fabric weights may require you to loosen or tighten the hoop. It might take a few attempts to get the exact setting for the fabric you are working with. Most fabrics do not require the hoop to be tightened down once in the hoop.

Attaching or Moving the Hoop Support Arms

Depending on the hoop you plan on using, the hoop support arms on the machine will need to be in the inner position, outer position, or removed completely if using a clamp or the wide angle driver.



This section will walk you through attaching and removing the support arms properly as well as adjusting the spring clips.

Attaching the Hoop Support Arms

Determine which support arm position the chosen hoop requires. Most of the smaller hoops require the inner position. Most of the larger hoops require the outer position.


1. Align the hoop arms to either the inner holes or the outer holes on the x-carriage. There will be two holes for each support arm.
2. Make sure the clips on the ends where the tubular frame will attach are facing up. The sides of the hoop arms should face outward. This will ensure the brackets are attached to the correct side of the carriage. Also make sure both clips are attached securely to the arms.
3. Insert two thumbscrews for each arm. Screw them in to almost finger tight.



4. Install a hoop by sliding the side brackets of the hoop underneath the spring clips on the support arms. Slide the hoop towards the rear of the machine until it snaps into place and the brackets are fully seated beneath the spring clips. Make sure that the slotted bracket is to the right as you are facing the machine. The support arms will still move a little.



5. Using the installed hoop as a guide, square up the support arms.

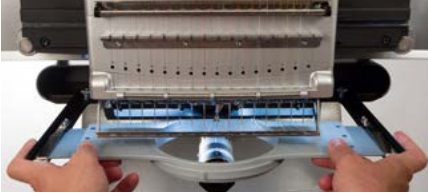

6. Tighten the thumb screws to finger tight.
7. Using a 6mm hex wrench, tighten the screws a quarter to half turn more. Do not overtighten as the screws are designed to snap before damage to the x-carriage can occur.



If the hoop brackets shift forward and back, the spring clip may need to be adjusted. See the information below.

Removing the Hoop Support Arms

1. Use a 6mm hex wrench to loosen each of the two thumb screws attaching each arm to the x-carriage.
2. Using your fingers, fully loosen the thumb screws.
3. Remove the support arms from the x-carriage.

Adjusting the Spring Clips

When you have a hoop installed, you should make sure both spring clips are attached securely to the arms. If either side of the hoop can move front to back underneath the clip, the clip needs to be adjusted. It may be necessary to move the hoop forward for easier access to the nuts holding the clips. To adjust the clip:

1. Use a 5mm Hex nut driver to loosen the two nuts holding the clip in place.
2. Push the block underneath the clip as far forward as it will go.



3. Hold the block in place while tightening the nuts.

Loading a Hoop onto the Machine

1. Install a hoop by sliding the side brackets of the hoop underneath the spring clips on the support arms. Make sure that the slotted bracket is to the right as you are facing the machine.



2. Slide the hoop towards the rear of the machine until it snaps into place and the brackets are fully seated beneath the spring clips.
3. Pull back gently on the hoop arms to ensure the spring clips are engaged.
4. Run your fingers around the edges of the hoop to ensure that sleeves, collars, zippers or other garment parts are not inadvertently under the hoop. Balloon the garment out around the cylindrical lower arm. This will prevent other garment parts from becoming sewn into the underneath side of the embroidery.





Adjusting the Presser Foot

The machine has an adjustable presser foot that can be set from 0.5mm to 3.5mm above the needle plate. The presser foot height should be changed when the thickness of the material you are sewing changes dramatically.



To adjust the presser foot height, the software must be open, and your machine must be on and communicating with it. A hoop with the fabric you will be using should be installed.

1. Adjusting the presser foot is easiest with the needle case moved to needle 16. It is not necessary, but it makes the adjustment gear easier to see. If the machine is not on needle #16, the gear can still be accessed. Do not attempt to move the needle case during the following steps.
2.  In the software, press the settings button.
3. Make sure that only the material is under the needle, for the next step will command the machine to lower the needle.
4.  Press the Lower Presser Foot button.
5. Locate the presser foot eccentric (gear) behind the needle case.



6. Turn the gear with your fingers to adjust the presser foot height up or down as needed.
7. Set the presser foot height over an unsewn section of the fabric. Set the presser foot so that it is just touching the material.



8. Once adjusted, press the raise presser foot button in the software.

Setting the Presser Foot for Different Materials

The presser foot will need to be adjusted whenever you drastically change the thickness of material that you are sewing on. For example, if you sew a sweatshirt and then sew a T-shirt, the presser foot would need to be adjusted.

The presser foot is meant to stabilize the material as the needle moves down through it and then help keep the material off of the needle as the needle moves back up. Ideally, the presser foot would sit just on the surface of the material, but that setting may not work for all material types.

For squishy materials like fleece or terry cloth, it is often better to lower the foot a bit more and press into the material.

Symptoms of Poor Presser Foot Height

Having the presser foot set poorly can result in a few sewing issues.

Presser Foot Height	Symptom
Too High	<ul style="list-style-type: none">• Thread breaks• Poor registration
Too Low	<ul style="list-style-type: none">• Louder sewing• Faint lighter halo around designs or dark fabric (Usually removed with steam, water, or a light ironing aid)

Keypad Operations



The machine keypad controls not only the starting and stopping of the machine, but it also provides access to change hoop position, sew speed, as well as the active needle. Many of these functions require the pressing of just a single button. Other functions require pressing multiple buttons simultaneously.

One Touch Controls



Start

Press to start sewing

When sewing, press and hold to sew slowly. Release to resume normal sew speed.



Stop

Press to stop sewing



Emergency Stop (E-Stop)

Press this emergency stop button to stop immediately and cut power to the motors of the machine. Turn the knob clockwise to release.



Frame Back

Move backward through a design one stitch at a time without stitching. Hold to move. Release to stop.

After 15 stitches, machine will speed up. Press the stop button to stop.



Frame Forward

Move forward through a design one stitch at a time without stitching. Hold to move. Release to stop.

After 15 stitches, machine will speed up. Press the stop button to stop.



Laser

Press to illuminate the point directly below the active needle.



Center

Press for 1 second to change the focus of the OS to this machine. This only matters when multiple machines are present.



Down Arrow (Held for 3 seconds)

Moves the frame out as for an applique. Repeat to move the hoop to the previous position.

Key Combinations

Center Hoop



Hoop + Center: Centers the currently selected hoop on the machine.

Move Hoop



Hoop + Up Arrow: Moves the hoop so the needle will sew higher in the hoop.



Hoop + Down Arrow: Moves the hoop so the needle will sew lower in the hoop



Hoop + Left Arrow: Moves the hoop so the needle will farther left in the hoop.



Hoop + Right Arrow: Moves the hoop so the needle will farther right in the hoop

Trace Design



Hoop + Trace: Traces around the outer edges of the design.

Bypass "Trim Required"



Hoop + Adjustment: Clears and ignores the "Trim Required" message. This indicates to the machine that no thread is through the cloth.

Speed Change



Adjustment + Up Arrow: Increases sew speed by 50 s.p.m.



Adjustment + Down Arrow: Decreases sew speed by 50 s.p.m.

Change Active Needle



Needle Case + Left Arrow: Changes the active needle by moving the needle case to the left.



Needle Case + Right Arrow: Changes the active needle by moving the needle case to the right.

Trim Immediate



Adjustment + Needle Case: Performs a trim command.

Open/Close Grabber Bar



Adjustment + Center: Opens or closes the grabber bar.

Return to Last Stitch



Left Arrow + Right Arrow: If a hoop has been moved during the sewing of a design, pressing this combination will move the hoop back to the position of the most recent stitch to sew.

This can be used to recover the hoop position if the hoop arms get shifted when e-stop is engaged. Use this command after disengaging e-stop.

Retain X/Y Position



Up Arrow + Down Arrow: If a hoop has been moved during the sewing of a design, pressing this combination will keep the hoop in the position to continue sewing.

Move to Color



Needle Case + Up Arrow: Moves to the next color in the design.



Needle Case + Down Arrow: Moves to the previous color in the design.

LED Indicator

The Status Indicator LED is illuminated when the machine is turned ON.

The LED color and whether it is blinking indicates the machine status or if it has a fault.

Status Light Condition	Definition	Action to Take
Green (blinking)	Machine is on, but no RSA files loaded yet	Start software, check connections
Green (continuous)	Machine is on and ready for operation	
Red (blinking slow)	Indicates a thread break	Re-thread the needle with thread break
Red (blinking fast)	Indicates the machine has run out of bobbin thread	Replace the bobbin
Red (continuous)	Indicates the machine is in E-Stop engaged mode	Release the red emergency stop button

Needle Types and Replacements


Embroidery quality can be greatly affected by your choice of needles. You will need to find what works best with your applications. The following information should help.

Replacing a Needle

Sew conditions and material properties will affect the life of a needle, but eventually, needles will need to be changed.



1. Make sure the safety grabber blade is in the back position before changing a needle. If it is not, press the Adjustment and Center keys on the machine keypad to move the grabber back.
2. Above each needle is a needle clamp set screw that holds it in place. Using a small flat-blade screwdriver, turn the needle clamp set screw counterclockwise about a half of a turn, until the needle can slide down and out of the needle bar. Do not loosen too much or remove the set screw. Loosen the screw just enough for the needle to be removed.

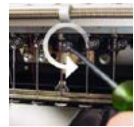

3. Remove the needle by pulling down on the needle.
4. Embroidery needles have a front and a back side. The needle must be installed correctly or the sew quality may suffer. If you install the needle incorrectly, you may also get thread breaks. The front of the needle has a long groove (thread guide), while the back has an indented notch (scarf) just above the eye of the needle.



5. With the thread guide facing forward and the scarf facing back, slide the needle up and into the needle clamp as far as it will go. The eye of the needle should then be turned 5° to the right. The acceptable range is 0° - 20° to the right.



6. A needle orientation magnet may be used to help determine the angle of the needle eye. This cylindrical magnet can be temporarily attached to the front of the needle just above the eye. The end of the magnet will rest on each side of the thread guide and stick straight out from the needle. This will better indicate the angle of the eye. For reference, one minute is 6° on a clock face.
7. While holding the needle in place, re-tighten the needle clamp set screw to hold the needle in place.



Common Reasons to Change the Needle

- The needle breaks or is bent.
- The thread will consistently fray - this usually means there is a bur on the needle causing it to fray a part of the thread.
- The needle is dull.
- Sewing conditions change, such as a change in fabric.

Choosing a Needle

Your machine utilizes DBxK5 needles. Among other things, this means that they are industrial needles with larger eyes.



Needle Sizes

Needles come in a variety of sizes, and most are marked with two numbers. For example, you will find 75/11 needles. The first number is metric and is the diameter of the needle blade. It is measured in hundredths of a millimeter. A 75/11 needle has a blade that is 0.75mm in diameter.

Standard sewing conditions will utilize needle sizes ranging from 65/9 to 80/12 needles.

Smaller needles work well for finer materials, thinner threads, and delicate detail work.

Larger needles work well for tougher and more abrasive materials. As the holes made by the needle are larger, sewing creates less friction on the threads and helps prevent thread breaks.

melco

Size	Benefit	Drawback
60/8	Used for the thinnest threads and finest detail work.	Thinner needle blade is more prone to needle deflection and breakage. Uncommon needle size and can be difficult to source and purchase.
65/9	Smallest of the more common needles. Used for fine fabrics, 60-weight thread, and delicate design details and tiny lettering.	Thinner needle blade is more prone to needle deflection and breakage.
70/10	Used for fine fabrics, design details and small letter. Good needle size for a larger majority of embroidery work.	Thinner needle blade is more prone to needle deflection and breakage.
75/11	Standard needle size and good for the majority of embroidery applications.	May be too large for finer detail work.
80/12	Largest of the more common needles. Often used caps with buckram backing or cotton duct jackets to help alleviate thread breaks.	Larger holes can damage finer materials and smaller design details.
90/14	Used with some specialty and metallic threads.	Larger holes can damage finer materials and smaller design details. Uncommon needle size and can be difficult to source and purchase.
100/16	Used with the thicker 12-weight threads like the wool-acrylic blends.	Larger holes can damage finer materials and smaller design details. Uncommon needle size and can be difficult to source and purchase.

Needle Points

Needle points also come in a variety of options. The main two are sharp and ball point.

Sharp point needles are generally better at cutting through materials and are usually used on tightly woven or non-woven.

Ball point needles are most often used on knit materials. They tend to move the threads of the material to the side of the needle as they sew. Ball point needles are usually marked with a “BP” on the package.



Needle Coatings

Needles are offered with a few different coatings.

Standard needles are silver in color and offer a sewing life of approximately 4 to 6 solid sewing hours.

Titanium needles are gold in color and offer an extended sewing life of 2 to 3 times the life of a standard needle. While they are stronger needles, they have little flex. If deflected, they will often break instead of bend.

Other needle coatings exist to cut down on the heat built up when traveling through synthetic materials.



Sewing Caps

Sewing caps will require a little more setup than sewing a flat product. For sewing caps, you will need to do the following.

1. Select the appropriate hoop in software
2. Load the Wide Angle Driver (this may need adjustment the first time)
3. Hoop a cap - this will change depending on the cap frame. Conventional Cap Frame (CCF) or Wide Angle Cap Frame (WACF)
4. Load the hooped cap onto the driver
5. Set up the design for caps
6. Load the design and proper settings
7. Adjust the presser foot for the cap
8. Center the design on the cap

The next few sections of this document will assist in sewing a cap.

Selecting the Wide Angle Driver and Hoop

Because the offset of the cap driver is indicated by the driver color, it is extremely important to select the wide angle driver color under settings.



Set Driver Color

1. Press the settings button on the main page.
2. Choose the color of driver. A green check indicates the enabled driver color.
3. Press the confirm button to confirm the machine settings, exit the settings screen, and return to the main screen.

Select Hoop

In the hoop selection screen, select the hoop you are planning on using. Selecting the hoop before loading the driver onto the machine isn't necessary, but it can make the process easier.

Installing & Removing the Wide Angle Driver

Both the cap frames and the micro clamps utilize the Wide Angle Driver. The Red Wide Angle Driver consists of two pieces:



- The (red) cap frame driver ring
- The lower arm bracket

You must ALWAYS select the proper cap frame hoop in the software when sewing with cap frames. Failure to do so may result in damage to your equipment!

Red Wide Angle Driver Installation





1. Start with the correct hoop selected and displayed on screen.
2. Center the hoop on the machine by either pressing the “Hoop” and “Center” keys simultaneously on the machine keypad or pressing the “Move To Center” button under the Move Screen in the software. This will move the machine to an easier position for installing the cap driver. If the hoop is already at center, this button will be slightly transparent and unavailable.

 +  on the machine keypad

or

 →  →  in the software

3. It is also beneficial to move the machine to either needle 8 or needle 9. This can be done by pressing the “Needlecase” key and the “Left” or “Right” arrow key on the machine keypad.

 +  or  + 

4. If attached, remove the hoop arms from the machine. To do this, use a 6mm Allen wrench to loosen the two thumb screws attaching each arm. Unscrew them and remove the arms.



Failure to remove the hoop arms will result in the wide angle driver colliding with the arms during sewing.

5. Remove the hook guard:


For EMT16X

Loosen the thumb screw securing the hook guard and slid it away from the machine.



For EMT16, EMT16 PLUS,
& most previous models.

Using a 2mm hex wrench, loosen the two button head screws securing the hook guard and slide it away from the machine.

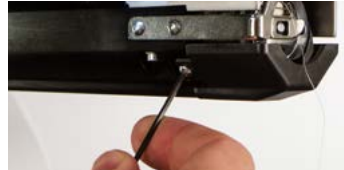

6. Loosen the knobs of the lower shaft support until the top of screws are flush with the t-nut.
7. Slide the shaft support mount into the lower arm extrusion and toward the back of the machine until it contacts the hard stop. It should slide smoothly into the t-channel. The t-nut must go all the way back to the hard stop or the shaft will be set too far forward on the machine.

For EMT16X



For EMT16, EMT16 PLUS,
& most previous models.



8. Tighten the two knobs.

For EMT16X



For EMT16, EMT16 PLUS,
& most previous models.



9. Reattach the hook guard by sliding it back into place and tightening the two small screws with a 2mm hex wrench.

10. A few drops of sewing machine oil should be applied to the lower support shaft prior to the initial installation of the driver ring assembly. This oil should be applied every three months on later installations.



11. Slide the red driver assembly onto the lower arm and support shaft. This may be easier if the grabber bar of the machine is closed. To close the bar, simultaneously press the "Adjustment" and "Center" keys on the keypad of the machine.



Then, slide the red driver assembly onto the lower arm and support shaft. Notice the orientation of the ring in the picture.

For EMT16X



For EMT16, EMT16 PLUS,
& most previous models.



- Using two of the thumb screws from the hoop arms, attach the red driver to the x-carriage of the machine. The driver will attach to the two innermost holes. Tighten them to finger-tight, and then use a 6mm Allen wrench to tighten an eighth to quarter turn more. Do not over-tighten the screws as they are designed to break before damage to the machine can occur.



The red driver ring should slide easily over the lower arm of the machine and should allow for a business card or two to fit between the ring and the lower arm. The space should be enough for the card(s), but no more. If the gap between the ring and the lower arm is incorrect, or if you are unable to install the driver, it will need to be adjusted. See the adjustment section for instructions on how to test and adjust.

- The Red Wide Angle Driver is now installed and ready to use.

Remove the support wings if using the Conventional Cap Frame or micro clamps. Support wings may also need to be removed when design size pushes the physical limits of a specific cap. For instructions on removing the support wings, see the corresponding section of this document.

Red Wide Angle Driver Removal

1. Starting with a 6mm Allen wrench, remove the thumbscrews attaching the red driver assembly to the x-carriage.



Slide the red driver assembly toward you and off of the lower arm and support shaft. This may be easier if the grabber bar of the machine is closed. To close the bar, simultaneously press the "Adjustment" and "Center" keys on the keypad of the machine.



For EMT16X



For EMT16, EMT16 PLUS,
& most previous models.



2. Remove the hook guard:

For EMT16X

Loosen the thumb screw securing the hook guard and slid it away from the machine.



For EMT16, EMT16 PLUS,
& most previous models.

Using a 2mm hex wrench, loosen the two button head screws securing the hook guard and slide it away from the machine.



3. Loosen the knobs of the lower shaft support. Then, slide the lower support shaft out of the t-channel and off the machine.

For EMT16X



For EMT16, EMT16 PLUS,
& most previous models.



4. Reattach the hook guard by sliding it back into place and tightening the screw(s).
5. The wide angle driver is now removed. Hoop arms can be reattached to sew with standard hoops.

Red Wide Angle Driver Cap Support Wings (Option)

This option is not supported on a needle plate trimmer machine like the EMT16X.


The cap support wings of the wide angle driver will need to be removed to use the driver with the Conventional Cap Frame (CCF) or any of the Micro Clamps. They may also need to be removed for any design that pushes the physical limit of any specific cap style or a smaller cap.

Installation and Adjustment of the Cap Support Wing Assembly (Option)

1. Remove the driver cylinder from the machine and lay it upside down on a flat surface.
2. Remove the 4 nuts from the threaded standoffs of the cap support wing assembly.
3. Make sure the 2 phillips head screws on the connecting bracket are loose.
4. Install the cap support assembly on the driver cylinder. Slightly pivot the assembly left and then right during the installation to ease each post past the white rollers.




5. Assemble the 4 nuts onto the threaded posts by hand. Allow them to stay slightly loose. This will enable the adjustment of the support wing assembly to the machine.

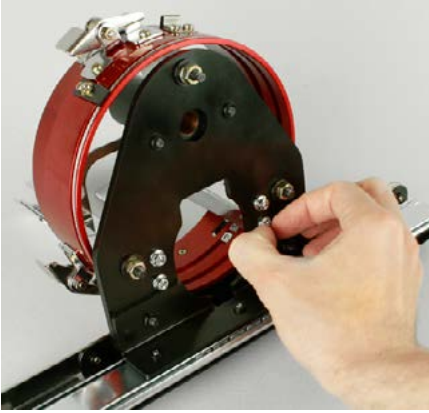

6. With the cap support wing assembly loosely installed on the wide angle driver, install the driver onto the machine.
7. Using two of the thumb screws from the hoop arms, attach the red driver to the x-carriage of the machine. Tighten them to finger-tight, and then use a 6mm allen wrench to tight an eighth to quarter turn more.

Do not over-tighten the screws as they are designed to break before damage to the machine can occur.

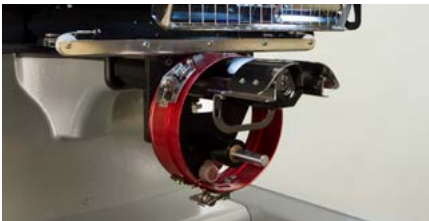

8. Move the driver and carriage back until the cap support wing assembly fully covers the needle plate.



9. Place a business card between the cap support wings and the needle plate.



10. Adjust one side of the cap support until it makes contact with the business card and needle plate. Tighten the two nuts on the back of the driver.



11. Repeat this process for the other side of the cap support.

When installing the cap support wings, ensure that there is a small gap between the cap support wing mounting bracket and the white roller. If no gap is present, it will cause wear on the parts.



12. Tighten the two Phillips head screws on the connecting bracket.
13. Remove the business card and check that there is a gap between the cap support wings and the needle plate. Repeat the steps above if required to achieve a slight gap.



Removal of the Cap Support Wing Assembly (Option)

1. Remove the driver cylinder from the machine and lay it upside down on a flat surface.
2. Loosen, but do not remove, the two Phillips screws from the cap support connecting bracket.



3. Remove the four nuts on the back of the driver. A 7mm hex driver or wrench will be needed.



4. Remove the cap support wing assembly. Slightly pivot the assembly from left to right and back again while removing it. This will help to ease each leg around the roller.



5. Place the 4 nuts back on the threaded standoffs of the cap support wing assembly to prevent their loss.



Adjusting the Red Wide Angle Driver

This procedure may need to be performed if the Red Wide Angle Driver was purchased separately from your machine, the driver has been dropped or mishandled, if the initial installation of the driver shows the adjustment to be off, or if prompted by technical support.



The Red Wide Angle Driver may need to be adjusted to custom-fit each machine. A driver that is not properly adjusted to the machine it is used on will result in negative impact to sew out quality and machine productivity and reliability.

The following tools will be used:

- Screwdriver, Hex Drive, Ball End, 4mm
- Hex Set, 7 Pieces, Metric Long – 6mm and 2mm

Testing for Appropriate Adjustment

1. Install the driver using the instructions for Installing the Red Wide Angle Driver.
2. Position the driver so that the bushing is aligned to the front of the support shaft and the driver ring is centered with the hole in the needle plate. Reference the ring's frame location tab.



3. Place a business card of medium to heavy stock (or equivalent) between the needle plate and the driver ring. A single business card should be able to slide between them with little resistance. A gap of two business cards is acceptable.

For EMT16X





For EMT16, EMT16 PLUS,
& most previous models.



4. If the gap is too small or too large, the driver will need to be adjusted using the steps below.

Adjustment Procedure

1. Begin by loosening the two bearing block hex screws and the two interface bracket screws using the 4mm hex screwdriver.

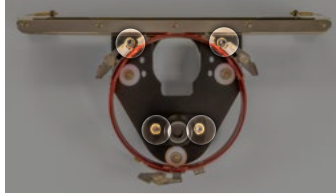

2. Install the Red Wide Angle Driver on your machine. See the installation section of the document for details.
3. Position the driver so that the bushing is aligned to the front of the support shaft and the driver ring is centered with the hole in the needle plate. Reference the ring's frame location tab.

For EMT16X

For EMT16, EMT16 PLUS,
& most previous models.



- Place a business card of medium to heavy stock (or equivalent) between the needle plate and the driver ring. This will act as a spacer. The ring should just rest on the card.

For EMT16X



For EMT16, EMT16 PLUS,
& most previous models.



- Making sure the edges of the two black brackets are aligned, tighten one of the upper screws.

For EMT16X




For EMT16, EMT16 PLUS,
& most previous models.



- Tighten the opposite screw securing the bearing mounting block.



- Tighten the second upper screw securing the bracket and then the second lower screw securing the bearing mounting bracket. Tightening these four screws in a star-like pattern achieves the best results. Then remove the business card.

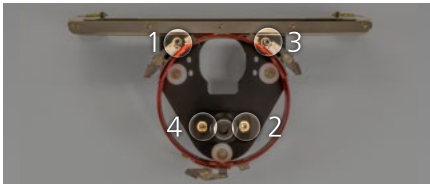

- Move the y-beam and x-carriage by hand to ensure there is no binding. This can only be accomplished with the machine off or the e-stop engaged.

If using the red wide angle driver with the Conventional Cap Frame or any of the micro-clamps, the cap support wings must be removed to prevent interference with the frames.

Hooping a Cap on the Conventional Cap Frame

The process for hooping a cap on the CCF is the same for almost any type of cap you are hooping.

Prepare the Cap

Preparing the cap before it is hooped will help the sew quality and ease the hooping process.

To prepare the cap,

1. Remove any cardboard from the inside of the cap.



2. Straighten the bill as best you can. It can be reshaped after the embroidery is complete.



3. Pull the sweatband to the outside of the cap. Near the back of the cap, the sweatband may be sewn into the cap. At this point, it may need to be folded a bit to fit in the frame.



4. If the cap has a braid, move it around the cap to the inside and under the brim.


Hooping the Cap

To hoop the cap,


1. Slide the cap frame onto the cap gauge. Make sure the locating tab on the cap gauge fits into the cap frame notch and the cap frame slips firmly under the two roller clips. Watch your fingers! Don't pinch them between the back of the frame and the gauge.



2. Unlatch the cap frame and swing the frame open and to the right. Do this by pulling the tab away from the frame. Then, press down on the edge of the frame to free the latch from the hook. Swing the frame open.

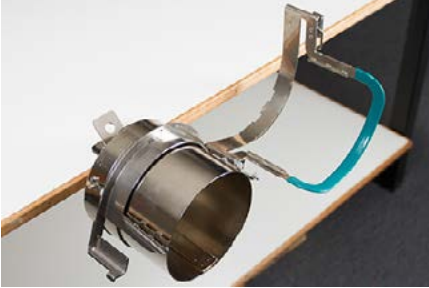

3. Place an appropriate backing over the gauge and the teeth of the cap frame. Make sure that the backing is long enough to support the full embroidery area. It may be easiest to use backing long enough to reach the teeth on each side of the cap frame.

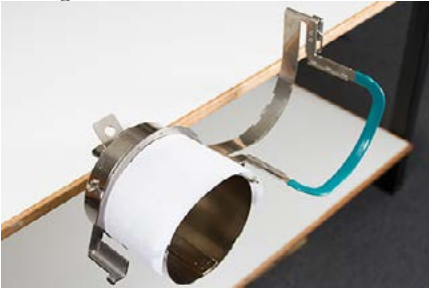

You may find it easier to place the backing inside the cap and load both the backing and the cap onto the frame at the same time. Use what method works best for you.



melco

4. Slide the prepared cap onto the cap frame with the visor pointing up and the frame going inside the cap. Make sure that the sweatband is flipped to the outside of the cap.



The sweatband may not touch the vertical ridge of the frame. That's okay. Different caps have varying sweatband widths and not all will appear the same when hooped.

5. The cap and backing should ride over the two posts with teeth on the sides of the frame.
6. Begin to close the frame. Insert the cap bill into the slot in the cap frame as you swing the frame closed over the front of the cap.
7. With the frame closed but not latched, adjust the position of the cap. Center the seam and level the cap as best you can.



8. Gently pull from the back of the cap. This will pull the cap down and snug against the frame.
9. With slight pressure still being applied to the back of the cap,
 - Push down on the end (top) of the bill to seat it against the top of the cap frame support.
 - Push back on the base of the bill to hold it against the plate at the front of the cap frame.

melco

- Push down on the middle top of the cap frame strap to seat it around the sweat band.



10. While holding the cap frame strap down around the sweat band, release the back of the cap and attach the strap latch over the hook on the support. Pull the tab to latch the cap frame.
11. You may now remove the cap frame from the gauge by pulling back on the handle.
12. The cap is now ready to be placed on the wide angle driver on the machine.

Hooping a Cap on the Wide Angle Cap Frame

The process for hooping a cap on the WACF is the same for almost any type of cap or visor you are hooping.



Prepare the Cap

Preparing the cap before it is hooped will help the sew quality and ease the hooping process.

To prepare the cap,

1. Remove any cardboard from the inside of the cap.



2. Straighten the bill as best you can. It can be reshaped after the embroidery is complete.



3. Pull the sweatband to the outside of the cap. Near the back of the cap, the sweatband may be sewn into the cap. At this point, it may need to be folded a bit to fit in the frame.



4. If the cap has a braid, move it around the cap to the inside and under the brim.

Hooping the Cap

To hoop the cap,

1. Slide the cap frame onto the cap gauge. Make sure the locating tab on the cap gauge fits into the cap frame notch and the cap frame slips firmly under the two roller clips. Watch your fingers! Don't pinch them between the back of the frame and the gauge.



2. Swing the metal strap open.



3. Place an appropriate backing over the gauge and the teeth of the cap frame. Make sure that the backing is long enough to support the full embroidery area. It may be easiest to use backing long enough to reach the posts on the bottom of the cap frame.



Some people find it easier to use the binder clips to hold the backing while they are hooping the cap. The downside to this technique is that you have to remove the clips from inside the cap when you are done hooping. That isn't always easy.

Clipping the backing before hooping the cap is completely optional.



4. Slide the prepared cap onto the cap frame with the visor pointing up and the frame going inside the cap. The bill should be pushed against the bill-stop on the frame. The bill should also be relatively centered on the frame. The centering mark on the bill-stop can be used for reference.



The sweatband may not touch the vertical ridge of the frame. That's okay. Different caps have varying sweatband widths and not all will appear the same when hooped.

5. The cap should ride over the two clip posts toward the bottom of each side of the frame.
6. Press down on the bill to ensure that it is falling in the bill trough of the cap frame. This will help keep the cap from slipping around or off the frame when the cap is being sewn.



7. Pull the side of the sweatband toward the cap frame and down. Smooth any bunching of the cap sides or sweatband. You may eventually need to fold the sweatband a bit to avoid the latching hook. But this will help with the placement of the cap on the frame. As you do this, watch the backing to ensure it is still in place.



8. When the left side of the cap is within the strap hinge post, swing the strap up and over the cap brim. On the side of the cap, the teeth of the strap should fall just above the seam attaching the sweatband of to the cap.



9. Continue bringing the strap around the front of the cap. On the front of the cap, the teeth of the strap must fall into the seam for the bill.



10. Bring the strap down the other side of the cap. Make sure the teeth of the strap fall just above the stitching attaching the sweat band. This will help ensure a level sewout.



11. Hook the latch on the strap into the hook on the latch post. You may need to fold or adjust the sweatband of the cap slightly to accommodate the hook and latch. At this point, you want to hook the latch, but not close the latch.



12. The cap frame strap may need to be tightened if it does not fit the cap snugly or loosened should it be too tight to fasten appropriately. This is only necessary when hooping a different style of cap for the first time using the cap frame. Subsequent hoopings of that style should fit well after the adjustment.
 - To adjust the cap frame strap, loosen the two wing nuts on the left side of the frame.



- Then, push the strap down against the cap brim moving from the latch toward the wing nuts so that it is very snug to the cap.



- Slide the strap toward the wing nut to remove the excess.



- Tighten the wing nuts while holding the strap tight against the cap.

13. Smooth the lower part of the cap while snapping the buckle closed. The buckle should be tight.



14. If clips were used to secure the backing while hooping, remove them now.



15. If sewing on the sides of the cap, smooth the cap material backward and over the clip posts on the both sides. Indent the cap material along the clip posts.
16. While pressing the cap material around the post, use a clip to secure the material to the post. Orient the clip handles toward the back of the cap.



These are only necessary when sewing the sides of the cap or if the cap is unstructured.


17. You may now remove the cap frame from the gauge.

melco

- To do this, place the palms of your hands on the gauge and place your fingers on the frame.



- Pull your fingers toward your palms until the cap frame release from the gauge.
- Inspect the hooping. Look at the inside of the cap to ensure that the backing is not bunched and that it is caught in the teeth of the frame.

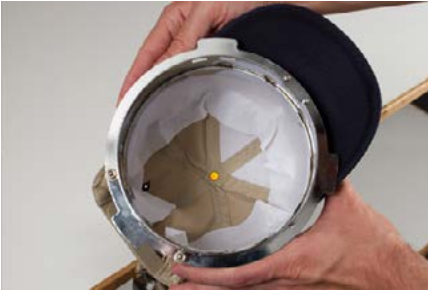

18. The cap is now ready to be placed on the wide angle driver on the machine.

Loading/Removing a Hoop with the Wide Angle Driver

Loading a Hoop

To load a hooped cap onto the installed wide angle driver, use the following steps.




1. Rotate the hooped cap so the bill 90° to allow the bill to pass under the needle case.



2. Rotate the bill back up so that it is behind the needle case and the location tab on the driver aligns with the notch in the frame.



3. This also aligns the rectangular holes along the edge of the frame with the spring loaded locking clamps on the driver.

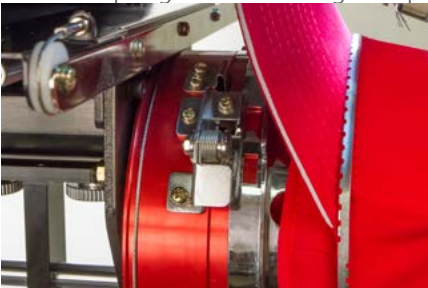

4. With the frame aligned, press the frame toward the driver until the three (3) spring loaded locking clamps snap into place. It may be helpful to grasp the back of the driver and close your grip to push the cap into place as pictured.




Removing a Hoop

To remove a hooped cap from the installed Red Wide Angle Driver, use the following steps.


1. Press the three locking clamps on the driver while gently pulling back on the frame.



2. This will allow the frame to release and be pulled free from the driver.

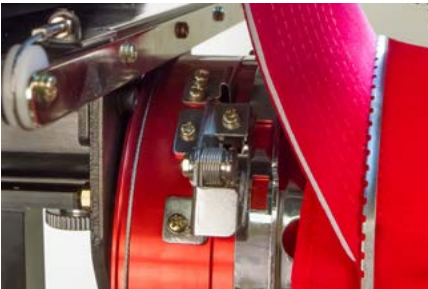

3. Rotate the hooped cap 90° so the bill can pass under the needle case. The hoop can now be removed from the machine.

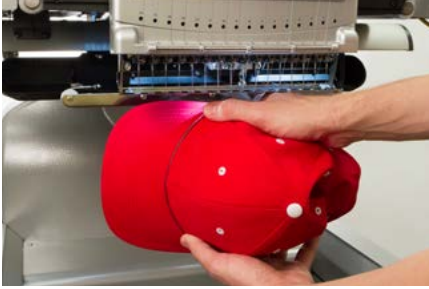

Digitizing for Caps

Setting up designs for caps requires a few considerations. Make sure that the design is of an appropriate size for the profile of the cap and ensure that the sew path will not create ripples, thread breaks, needle breaks, or registration issues. Consider the following when designing for caps.

- Design Size for Caps
- Sew Order for Cap Designs
 - Sew From the Bill Toward the Crown
 - Sew From the Center Toward the Sides
 - “Finish Elements As You Go”


Design Size for Caps

The cap frame that you are using will most likely handle a much larger design than the cap itself. The size of a design that is able to be sewn on a cap depends on the profile of the cap itself. Higher profile caps can accommodate much larger designs than lower profile caps.

As designs sew toward the top of the cap, the inside of the cap can brush the lower arm of the machine and restrict cap movement. This can cause some distortion and cause vertical lines to appear as if the tops move in toward the center of the cap. If the design sews even farther up on the cap, the pressure of the lower arm against the inside of the cap can cause the cap to be pushed off the frame.

To figure out how large of a design can safely fit on the cap,

1. Measure from the bill to where the cap really starts to curve over the head of the potential wearer. This will require a little bit of judgment.
2. Subtract one inch from that measurement to find a fairly safe design height. Stay within this size if the design contains right angles, borders, or fine details.
3. If the design is more organic and contains few borders or details, the size can slightly ($\approx 1/2''$) exceed the safe area calculated in the step above. However, some trapezoidal distortion may be noticeable.
4. The width of the design depends on the cap frame.

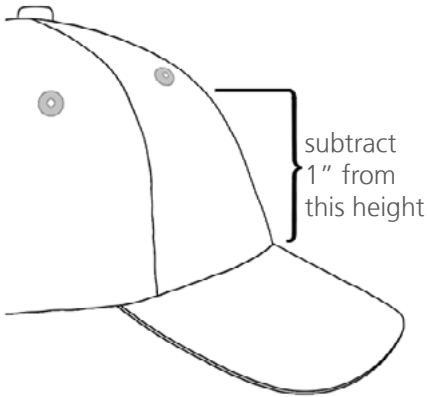

Sew Order for Cap Designs

Now that you have the size of the design figured out, the design needs to be digitized for a cap.

One of the challenges with embroidering caps is that the fabric moves and flags. The trick to sewing caps successfully is to use the design sew order to move the material where it can to little harm.

For cap designs, follow these three guidelines.

- Sew from the bottom (bill) toward the top (crown).
- Sew from the center (seam) toward the sides.
- Finish elements as you go. While less efficient, completing designs in smaller portions will help keep a tighter registration and help outlines and borders line up.

In embroidery, it is often a good idea to avoid sewing toward an anchor point. If the material is anchored to the backing or another element of the garment, like the bill of a cap, it will not move. Sewing toward one of these anchors can push a ripple of material. Once the anchor point is reached, the excess material has no place to go and a ripple is sewn into the garment.

Sew From the Bill Toward the Crown

The bill of the cap poses a bit more of a challenge if the material is stiff. A ripple of material formed from sewing toward the bill of a cap can deflect a needle and cause thread breaks and needle breaks.

Sew From the Center Toward the Sides

Digitizing the sew path to sew away from the bill and away from the center seam will help maintain design registration and avoid thread and needle breaks.



“Finish Elements As You Go”

Finishing elements as you go will mostly help with registration. For example, if you were setting up a design of lettering with borders, try sewing a letter or two and then bordering them. Sewing the whole word and then all the borders may sound more efficient, but it can result in material push and registration loss.

Sew Settings for Caps

The settings in the software will need to be adjusted for better quality on a cap. Be sure to address the following.

Design Orientation

To be oriented appropriately for a cap, the design usually needs to be rotated 180° in the software. For assistance on this, review the Move & Rotate section of this document.

Sew Speed

Sew speed for caps will need to be adjusted. Because the material is going around instead of back and forth, the machine speed will need to be set between 850 - 1200 stitches per minute. For newer embroiderers, starting at 1000 s.p.m. and adjusting from there may be a good idea.

For more information on setting the sew speed, see the machine speed section.

Material Thickness

Don't forget to change the material thickness for caps. There is a suggested cap setting that can be fine-tuned as you are sewing. For more information, see the material thickness section of this document.

Adjusting the Presser Foot for Caps

The presser foot will need to be adjusted any time you significantly change the thickness of the material you're sewing on.



With caps, adjusting the presser foot is a little different than with flat goods. Because they cap flags (bounces) and has a seam, it is often best to set the presser foot to a standard setting and adjust from there.

Make sure the machine is stopped.

Adjust the presser foot by rotating the adjustment gear counter clockwise until it can no longer rotate. This will take the presser foot to the lowest position possible. This can be accomplished with the needle at head up (default position) or at bottom center (as described in the adjusting the presser foot section).

If the needle is not at the presser foot adjustment point, the presser foot will not appear to move. Even if the needle is at the adjustment point, it may be difficult to see a change in the presser foot. The material of the cap is pressing up against it and you may not see it lift off the material. This is normal and will not affect the actual adjustment.

With the presser foot adjusted all the way down, rotate the gear clockwise and bring the presser foot back up. Count the clicks of the gear. Raise the presser foot two clicks back up. Again, you most likely will not see the presser foot move.

With the presser foot two clicks up from the bottom, your machine is adjusted and you are ready to trace the design and sew it out.

Centering a Design on a Cap

Unless you hooped absolutely perfectly, and that is exceeding difficult to do, you will most likely need to adjust the hoop position on the machine to better center the design on your cap.



The best way to accomplish this is to have the hoop loaded on the machine first.

Screen Versus Cap

Pressing the move to Center button in the software or commanding it from the keypad of the machine is convenient, but it doesn't work well for caps. It functions by centering the hoop or frame to the machine.


The software will display the frame limits. Centering the design within these limits will not necessarily center the design on the cap. Because caps have different profiles and embroiderers hoop inconsistently, small adjustments may need to be made to the hoop placement.

When the design is centered on the cap, the placement may appear to be off in the software and on screen.

Centering Vertically

Centering the design vertically will take a bit of measuring, but it only needs to be done once for a particular style of cap. Additional caps will not require vertical adjustments.

To find an appropriate vertical placement on the cap, measure from the bill of the cap to where the curve really starts to come over the head. This is similar to measuring the design height that the cap can accommodate. Once measured, divide the measurement in half. Measure up from the bill that half distance to find a good vertically centered placement for the design.

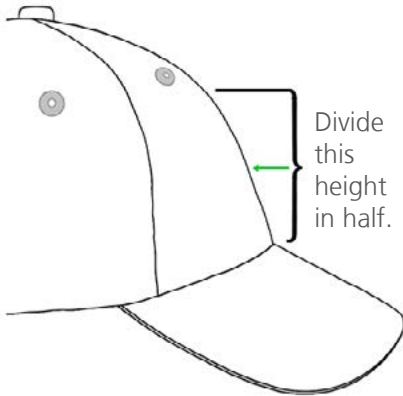

Marking this measurement on the cap with masking tape or tailor's chalk works well. Use the hoop and up or down arrows to move the hoop into position. As you use these keys, the machine's laser will illuminate the placement.

Centering Horizontally

With the cap frame loaded on the machine, use the Hoop Key and the left or right arrow on the machine keypad to center the cap horizontally. If the cap has six panels, you will have a seam running down the middle of the front. This acts as a marker for center. If the cap has five panels, it will not have a seam, and you may need to use a tape measure and tailor's chalk to find center.

Using the laser to line up to center may not work as well in this case. As the cap comes off the needle plate, the laser is displayed farther to the right. This is from the laser being set just behind the right upper arm front cover of the machine.

For a more accurate placement, line up the active needle (the needle with the presser foot behind it).

Trace the Design

Tracing the design using the hoop and trace keys simultaneously on the keypad of the machine will also give you a good idea of where the design will be sewn.

Watch the Hoop Limits

Depending on the structure of the cap, you will be able to sew within varying distances from the hoop limits. Softer, thinner, and more pliable materials will allow you to sew closer to the limit. Tougher and less flexible materials may cause the fabric to ramp up at the teeth causing flagging, needle deflection, and thread or needle breaks.

Maintenance

Maintenance will need to be performed on your machine to keep it running at an optimal level. Machine maintenance procedures can be found under the Settings Screen.

The Maintenance Screen will display procedures for the hook, weekly, monthly, and quarterly maintenance. Each procedure will move the machine to the appropriate location and walk through all the proper lubrications.

Hook maintenance should be performed every day before sewing and again after every four hours of solid sewing.

Wide Angle Driver Maintenance


Approximately once per year, the red wide angle driver will need to be cleaned and greased. The following steps will walk you through the procedure.



1. Remove the driver cylinder from the machine and lay it upside down on a flat surface.
2. Slide the driver ring fully to one side.




3. Clean the exposed portion of the exposed slider bearing groove with a clean towel.

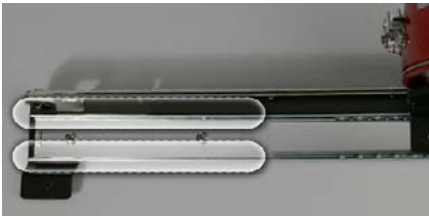

4. Apply a thin film of hp grease to the grooves of the slider bearing.



5. Move the driver all the way to the opposite side and repeat the previous two steps.

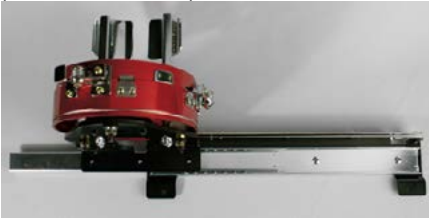

6. Move the driver back and forth a few times to spread the grease.
7. The driver may now be reinstalled on the machine or stored for future use.